


**Master Thesis**

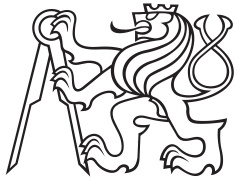

**Czech  
Technical  
University  
in Prague**

**F3**

**Faculty of Electrical Engineering  
Department of Measurement**

## **Learning and automation GPIO platform**

**Ondřej Hruška**

**Supervisor: doc. Ing. Radislav Šmíd, Ph.D.  
Field of study: Cybernetics and Robotics  
Subfield: Sensors and Instrumentation  
2018**





# MASTER'S THESIS ASSIGNMENT

## I. Personal and study details

Student's name: **Hruška Ondřej** Personal ID number: **420010**  
Faculty / Institute: **Faculty of Electrical Engineering**  
Department / Institute: **Department of Measurement**  
Study program: **Cybernetics and Robotics**  
Branch of study: **Sensors and Instrumentation**

## II. Master's thesis details

Master's thesis title in English:

**Learning and Automation GPIO Platform**

Master's thesis title in Czech:

**Výuková a automatizační GPIO platforma**

Guidelines:

Design and implement a modular system consisting of a motherboard and additional modules for connecting sensors, actuators and general inputs via I2C, SPI, UART, 1-Wire or other interfaces to the central system via USB, UART, and wireless interfaces. Allow access to built-in processor peripherals such as ADC, DAC, and timers (PWM, frequency measurement). Design a comfortable way to set the configuration without firmware changes. For the designed system, create a service library in C, Python, and MATLAB.

Bibliography / sources:

- [1] STMicroelectronics datasheets, <http://www.st.com>
- [2] Ganssle, J.: The Art of Designing Embedded Systems, Elsevier Science, 2008.
- [3] Chi, Qingping & Yan, Hairong & Zhang, Chuan & Pang, Zhibo & Da Xu, Li. (2014).: A Reconfigurable Smart Sensor Interface for Industrial WSN in IoT Environment. Industrial Informatics, IEEE Transactions on. 10. 1417-1425. 10.1109/TII.2014.2306798.

Name and workplace of master's thesis supervisor:

**doc. Ing. Radislav Šmíd, Ph.D., Department of Measurement, FEL**

Name and workplace of second master's thesis supervisor or consultant:

Date of master's thesis assignment: **10.01.2018** Deadline for master's thesis submission: \_\_\_\_\_

Assignment valid until:  
**by the end of summer semester 2018/2019**

\_\_\_\_\_  
doc. Ing. Radislav Šmíd, Ph.D.  
Supervisor's signature

\_\_\_\_\_  
Head of department's signature

\_\_\_\_\_  
prof. Ing. Pavel Ripka, CSc.  
Dean's signature

## III. Assignment receipt

The student acknowledges that the master's thesis is an individual work. The student must produce his thesis without the assistance of others, with the exception of provided consultations. Within the master's thesis, the author must state the names of consultants and include a list of references.

\_\_\_\_\_  
Date of assignment receipt

\_\_\_\_\_  
Student's signature



## Declaration

Prohlašuji, že jsem předloženou práci vypracoval samostatně a že jsem uvedl veškeré použité informační zdroje v souladu s Metodickým pokynem o dodržování etických principů při přípravě vysokoškolských závěrečných prací.

V Praze, 27. května 2018

.....

## Acknowledgements

blabla

## Abstract

This thesis documents the development of a general purpose software and hardware platform for interfacing low level hardware from high level programming languages and applications run on a PC, using USB and also wirelessly.

The requirements of common engineering tasks and problems occurring in the university environment were evaluated to design an extensible, reconfigurable hardware module that would make a practical, versatile, and low cost tool that in some cases also eliminates the need for professional measurement and testing equipment.

Several hardware prototypes and control libraries in programming languages C and Python have been developed. The Python library additionally integrates with MATLAB scripts. The devices provide access to a range of hardware buses and low level features and can be reconfigured using configuration files stored inside its permanent memory.

### Keywords:

**Supervisor:** doc. Ing. Radislav Šmíd, Ph.D.

## Abstrakt

Tato práce popisuje vývoj univerzální softwarové a hardwarové platformy pro přístup k hardwarovým sběrnicím a elektrickým obvodům z prostředí vysokoúrovňových programovacích jazyků a aplikací běžících na PC, a to za využití USB a také bezdrátově.

Byly vyhodnoceny požadavky typických problémů, vyskytujících se v praxi při práci s vestavěnými systémy a ve výuce, pro návrh snadno rozšiřitelného a přenastavitelného hardwarového modulu který bude praktickým, pohodlným a dostupným nástrojem který navíc v některých případech může nahradit profesionální laboratorní přístroje.

Bylo navrženo několik prototypů hardwarových modulů, spolu s obslužnými knihovnami v jazycích C a Python; k modulu lze také přistupovat z prostředí MATLAB. Přístroj umožňuje přístup k většině běžných hardwarových sběrnic a umožňuje také např. měřit frekvenci a vzorkovat či generovat analogové signály.

### Klíčová slova:

**Překlad názvu:** Výuková a automatizační GPIO platforma

# Contents

## Part I Introduction

<b>1 Motivation</b>	<b>3</b>
1.1 The Project's Expected Outcome .....	4
<b>2 Requirement Analysis</b>	<b>5</b>
2.1 Desired Features .....	5
2.1.1 Interfacing Intelligent Modules .....	5
2.1.2 Analog Signal Acquisition .....	6
2.1.3 Analog Signal Output .....	6
2.1.4 Logic Level Input and Output .....	6
2.1.5 Pulse Generation and Measurement .....	6
2.2 Host Computer Connection .....	7
2.2.1 Communication Interface .....	7
2.2.2 Configuration Files .....	7
2.3 An Overview of Planned Features .....	7
2.4 Microcontroller Selection .....	8
2.5 Form Factor Considerations .....	8
<b>3 Existing Solutions</b>	<b>11</b>
3.1 Raspberry Pi .....	11
3.2 Bus Pirate .....	12
3.3 Professional DAQ Modules .....	12

## Part II Theoretical Background

<b>4 Universal Serial Bus</b>	<b>17</b>
4.1 Basic Principles and Terminology .....	17
4.1.1 Pipes and Endpoints .....	17
4.1.2 Transfer Types .....	18
4.1.3 Interfaces and Classes .....	18
4.1.4 Descriptors .....	19
4.2 USB Physical Layer .....	21



4.3 USB Classes .....	22
4.3.1 Mass Storage Class .....	22
4.3.2 CDC/ACM Class .....	22
4.3.3 Interface Association: Composite Class .....	23
<b>5 FreeRTOS</b>	<b>25</b>
5.1 Basic FreeRTOS Concepts and Functions .....	25
5.1.1 Tasks .....	25
5.1.2 Synchronization Objects .....	26
5.2 Stack Overflow Protection .....	27
<b>6 The FAT16 File System and Its Emulation</b>	<b>29</b>
6.1 The General Structure of the FAT File System .....	29
6.1.1 Boot Sector .....	29
6.1.2 File Allocation Table .....	30
6.1.3 Root Directory .....	30
6.2 FAT16 Emulation .....	31
6.2.1 DAPLink Emulator .....	32
6.2.2 Handling a Read Access .....	32
6.2.3 Handling a Write Access .....	33
6.2.4 File Name Change .....	33
6.2.5 File Creation .....	34
6.2.6 File Content Change .....	34
<b>7 Supported Hardware Buses</b>	<b>35</b>
7.1 UART and USART .....	35
7.1.1 Examples of Devices Using UART .....	36
7.2 SPI .....	36
7.2.1 Examples of Devices Using SPI .....	37
7.3 I <sup>2</sup> C .....	38
7.3.1 Examples of Devices Using I <sup>2</sup> C .....	39
7.4 1-Wire .....	39
7.4.1 Examples of Devices Using 1-Wire .....	40

7.5 NeoPixel .....	40
<b>8 Non-communication Hardware Functions</b>	<b>43</b>
8.1 Frequency Measurement .....	43
8.2 Analog Signal Acquisition .....	45
8.3 Waveform Generation .....	46
8.3.1 Waveform Generation with DMA and a Timer .....	46
8.3.2 Direct Digital Synthesis .....	47
8.4 Touch Sensing .....	48
<b>Part III</b>	
<b>Implementation</b>	
<b>9 Application Structure</b>	<b>53</b>
9.1 User's View of GEX .....	53
9.1.1 Updating GEX Settings .....	54
9.1.2 Connecting Using the Wireless Module .....	54
9.1.3 Using the Control Interface .....	54
9.2 Internal Structure Block Diagram .....	55
9.3 FreeRTOS Synchronization Objects Usage .....	56
9.3.1 Message and Job Queue .....	56
9.4 Functional Blocks .....	56
9.5 Source Code Layout .....	57
9.6 Functions of the Core Framework .....	57
9.6.1 Resource Allocation .....	58
9.6.2 Settings Storage .....	58
9.6.3 Communication Ports .....	59
9.6.4 Message Passing .....	60
9.6.5 Interrupt Routing .....	60
<b>10 Communication Protocol</b>	<b>63</b>
10.1 Frame Structure .....	63
10.2 Message Listeners .....	64
10.3 Designated Frame Types .....	64

10.4 Bulk Read and Write Transactions .....	65
10.4.1 Bulk Read .....	65
10.4.2 Bulk Write .....	66
10.4.3 Persisting the Changed Configuration to Flash .....	67
10.5 Reading a List of Units .....	67
10.6 Unit Requests and Reports .....	67
10.6.1 Unit Requests .....	67
10.6.2 Unit Reports .....	68
<b>11 Wireless Interface</b> .....	<b>69</b>
11.1 Modulations Overview .....	69
11.1.1 On-Off Keying (OOK) .....	70
11.1.2 Frequency Shift Keying (FSK) .....	70
11.1.3 Gaussian Frequency Shift Keying (GFSK) .....	70
11.1.4 Minimum-Shift Keying (MSK) .....	70
11.1.5 Gaussian Minimum-Shift Keying (GMSK) .....	70
11.1.6 LoRa Modulation .....	70
11.2 Comparing SX1276 and nRF24L01+ .....	70
11.3 Integration of the nRF24L01+ into GEX .....	71
11.3.1 The Wireless Gateway Protocol .....	72
11.3.2 Gateway Initialization Procedure .....	73
<b>12 Hardware Realization</b> .....	<b>75</b>
<b>13 Units Overview, Commands and Events Description</b> .....	<b>77</b>
13.1 Naming Conventions and Common Principles .....	77
13.1.1 Unit Naming .....	77
13.1.2 Packed Pin Access .....	77
13.2 Digital Output .....	78
13.2.1 Digital Output Configuration .....	78
13.2.2 Digital Output Commands .....	78
13.3 Digital Input .....	79
13.3.1 Digital Input Configuration .....	79

13.3.2 Digital Input Events .....	80
13.3.3 Digital Input Commands .....	80
13.4 SIPO (Shift Register) Unit .....	80
13.4.1 SIPO Configuration .....	81
13.4.2 SIPO Commands .....	81
13.5 NeoPixel Unit .....	81
13.5.1 NeoPixel Configuration .....	82
13.5.2 NeoPixel Commands .....	82
13.6 SPI Unit .....	83
13.6.1 SPI Configuration .....	83
13.6.2 SPI Commands .....	84
13.7 I <sup>2</sup> C Unit .....	84
13.7.1 I <sup>2</sup> C Configuration .....	84
13.7.2 I <sup>2</sup> C Commands .....	84
13.8 USART Unit .....	85
13.8.1 USART Configuration .....	85
13.8.2 USART Events .....	86
13.8.3 USART Commands .....	86
13.9 1-Wire Unit .....	87
13.9.1 1-Wire Configuration .....	87
13.9.2 1-Wire Commands .....	87
13.10 Frequency Capture Unit .....	88
13.10.1 Value Conversion Formulas .....	88
13.10.2 Frequency Capture Configuration .....	89
13.10.3 Frequency Capture Commands .....	90
13.11 ADC Unit .....	91
13.11.1 ADC Configuration .....	92
13.11.2 ADC Events .....	92
13.11.3 ADC Commands .....	93
13.12 DAC Unit .....	95
13.12.1 DAC Configuration .....	95

13.12.2 DAC Commands . . . . .	95
13.13 PWM Unit . . . . .	96
13.13.1 PWM Configuration . . . . .	97
13.13.2 PWM Commands . . . . .	97
13.14 Touch Sense Unit . . . . .	97
13.14.1 Touch Sense Configuration . . . . .	97
13.14.2 Touch Sense Events . . . . .	98
13.14.3 Touch Sense Commands . . . . .	98
<b>14 Client Software</b>	<b>101</b>
14.1 General Library Structure . . . . .	101
14.2 Python Library . . . . .	101
14.3 MATLAB integration . . . . .	102
14.4 C Library . . . . .	103
<b>Part IV</b>	
<b>Results</b>	
<b>15 Conclusion</b>	<b>107</b>
<b>Appendices</b>	
<b>A Bibliography</b>	<b>111</b>

## Figures

1.1 A collection of intelligent sensors and devices . . . . .	3
2.1 A Discovery board with STM32F072 . . . . .	9
2.2 Form factor sketches . . . . .	9
3.1 Raspberry Pi minicomputers . . . . .	11
3.2 Bus Pirate v.4 (photo taken from [1]) . . . . .	12
3.3 Professional tools that GEX can replace . . . . .	13
4.1 USB hierarchical structure . . . . .	17
4.2 The logical structure of USB . . . . .	18
4.3 USB descriptors of a GEX prototype obtained using “lsusb” . . . . .	20
4.4 USB pull-ups . . . . .	21
6.1 An example of the GEX virtual file system . . . . .	32
7.1 UART frame format . . . . .	35
7.2 SPI timing diagram . . . . .	37
7.3 SPI master with multiple slaves . . . . .	37
7.4 I <sup>2</sup> C message diagram . . . . .	38
7.5 1-Wire connection topology with four slave devices . . . . .	39
7.6 A close-up photo of a WS2812B pixel, showing the LED driver IC . . . . .	40
8.1 Direct frequency measurement method . . . . .	44
8.2 Reciprocal frequency measurement method . . . . .	44
8.3 Frequency measurement methods comparison . . . . .	45
8.4 A diagram of the SAR type ADC . . . . .	46
8.5 A simple implementation of the waveform generator . . . . .	47
8.6 A block diagram of a DDS-based waveform generator . . . . .	48
8.7 The touch slider on a STM32F072 Discovery board . . . . .	49
8.8 A simplified schematic of the touch sensing circuit . . . . .	49
8.9 TSC operation oscilloscope screenshots . . . . .	50
9.1 Physical user interface of a GEX module . . . . .	53

9.2 Block diagram showing the internal logic in the GEX firmware .....	55
9.3 The general structure of the source code repository .....	57
9.4 An example allocation in the resource registry .....	58
9.5 Structure of the settings subsystem .....	59
10.1 A diagram of the bulk read and write transaction. ....	66
11.1 Test setup with a GEX prototype controlling two nRF24L01+ modules .....	69
11.2 A block diagram of the wireless connection .....	72
13.1 Pin packing .....	78
13.2 SPI transaction using the QUERY command .....	83
14.1 GEX Zero with the Micro Dot pHAT add-on board showing a test pattern ..	103

# Tables

- 6.1 Areas of a FAT-formatted disk ..... 30
- 6.2 Structure of a FAT16 directory entry ..... 31
  
- 7.1 NeoPixel pulse timing ..... 41
  
- 11.1 Comparison of the SX1276 and nRF24L01+ wireless transceivers ..... 71



## Acronyms

<b>AC</b> alternating current	<b>LED</b> light emitting diode
<b>ACM</b> Abstract Control Model	<b>LFN</b> Long File Name
<b>ADC</b> Analog/Digital Converter	<b>LIN</b> Local Interconnect Network
<b>API</b> application programming interface	
<b>BFSK</b> binary frequency-shift keying	<b>MBR</b> master boot record
<b>BOT</b> Bulk Only Transport	<b>M-Bus</b> Meter Bus
	<b>MCU</b> microcontroller unit
<b>CAN</b> Controller Area Network	<b>MISO</b> Master In, Slave Out
<b>CDC</b> Communication Devices Class	<b>MOSI</b> Master Out, Slave In
<b>CDC/ACM</b> Communication Devices Class / Abstract Control Model	<b>MSC</b> Mass Storage Class
<b>CRC</b> cyclic redundancy check	<b>MSK</b> minimum-shift keying
<b>CSB</b> Chip Select Bar	
<b>CTS</b> Clear To Send	<b>NCO</b> numerically controlled oscillator
	<b>NDIR</b> nondispersive infrared
<b>DAC</b> Digital/Analog Converter	<b>NFC</b> near-field communication
<b>DALI</b> Digital Addressable Lighting Interface	<b>NRZI</b> Non Return to Zero Inverted
<b>DC</b> direct current	<b>NSS</b> Negated Slave Select
<b>DDS</b> Direct Digital Synthesis	<b>NVIC</b> Nested Vectored Interrupt Controller
<b>DE</b> Driver Enable	
<b>DMA</b> Direct Memory Access	<b>OOK</b> on-off keying
<b>DTR</b> Data Terminal Ready	<b>OS</b> operating system
<b>FAT</b> File Allocation Table	<b>PC</b> personal computer
<b>FS</b> file system	<b>PCB</b> printed circuit board
<b>FSK</b> frequency-shift keying	<b>PMBus</b> Power Management Bus
	<b>PWM</b> pulse width modulation
<b>GFSK</b> Gaussian frequency-shift keying	
<b>GMSK</b> Gaussian minimum-shift keying	<b>RAM</b> random-access memory
<b>GND</b> ground	<b>ROM</b> read-only memory
<b>GPIO</b> general purpose input/output	<b>RTC</b> real-time clock
<b>GPS</b> Global Positioning System	<b>RTS</b> Ready To Send
<b>GSM</b> Global System for Mobile communications	
<b>GUI</b> graphical user interface	<b>SAR</b> successive approximation register
	<b>SCCB</b> Serial Camera Control Bus
<b>HART</b> Highway Addressable Remote Transducer	<b>SCK</b> Serial Clock
	<b>SCL</b> Serial Clock Line
<b>I<sup>2</sup>C</b> Inter-Integrated Circuit	<b>SCSI</b> Small Computer System Interface
<b>I<sup>2</sup>S</b> Inter-IC Sound	<b>SDA</b> Serial Data Line
<b>IAD</b> Interface Association Descriptor	<b>SMBus</b> System Management Bus
<b>IC</b> integrated circuit	<b>SPI</b> Serial Peripheral Interconnect
<b>IDE</b> integrated desktop environment	<b>SS</b> Slave Select
	<b>SSH</b> Secure Shell
<b>LCD</b> liquid crystal display	<b>STEM</b> Science, Technology, Engineering and Mathematics
	<b>TCO</b> temperature-compensated oscillator
	<b>TSC</b> Touch Sensing Controller

**TTL** transistor-transistor logic

**TVS** transient-voltage suppressor

**TWI** Two-Wire Interface

**UART** Universal Asynchronous Receiver/Transmitter

**USART** Universal Synchronous/Asynchronous Receiver/Transmitter

**USB** Universal Serial Bus

**VCO** voltage-controlled oscillator



**Part I**

**Introduction**




# Chapter 1

## Motivation

Prototyping, design evaluation, and the measurement of physical properties in experiments make a daily occurrence in the engineering praxis. Those tasks often involve the generation and sampling of electrical signals coming to and from sensors, actuators, and other circuitry.

In the recent years, a wide range of intelligent sensors became available thanks to the drive for miniaturization in the consumer electronics industry. Those devices often provide a sufficient accuracy and precision while keeping the circuit complexity and cost low. In contrast to analog sensors, here the signal conditioning and processing circuits are built into the sensor itself and we access it using a digital connection.

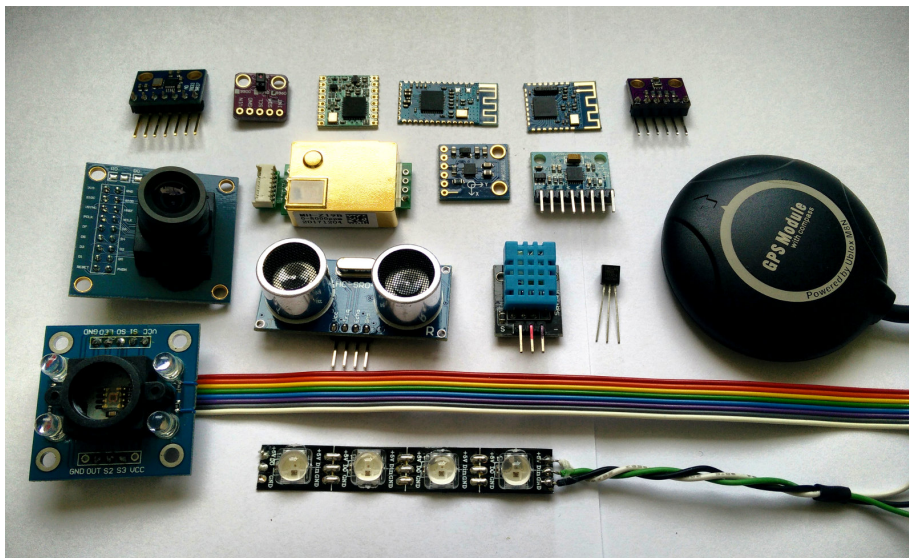

**Figure 1.1:** A collection of intelligent sensors and devices, most on breadboard adapters: (from top left) a waveform generator, a gesture detector, a LoRa and two Bluetooth modules, an air quality and pressure sensor, a CO<sub>2</sub> sensor, a digital compass, an accelerometer, a GPS module, a camera, an ultrasonic range finder, a humidity sensor, a 1-Wire thermometer, a color detector and an RGB LED strip.

To conduct experiments with those integrated modules, or even just familiarize ourselves with a device before using it in a project, we need a way to easily interact with them. It's also convenient to have a direct access to hardware, be it analog signal sampling, generation, or even just logic level inputs and outputs. However, the drive for miniaturization and



## Chapter 2

### Requirement Analysis

We'll now investigate some situations where GEX could be used, to establish its requirements and desired features.

#### 2.1 Desired Features

##### 2.1.1 Interfacing Intelligent Modules

When adding a new digital sensor or a module to a hardware project, we want to test it first, learn how to properly communicate with it and confirm its performance. Based on this evaluation we decide whether the module matches our expectations and learn how to properly connect it, which is needed for a successful PCB layout.

In experimental setups, this may be the only thing we need. Data can readily be collected after just connecting the module to a PC, same as commanding motor controllers or other intelligent devices.

A couple well known hardware buses have established themselves as the standard ways to interface digital sensors and modules: **Serial Peripheral Interconnect (SPI)**, **Inter-Integrated Circuit (I<sup>2</sup>C)** and **Universal Synchronous/Asynchronous Receiver/Transmitter (USART)** (**UART** in asynchronous mode) are the most used ones, often accompanied by a few extra **general purpose input/output (GPIO)** lines for features such as Reset, Chip Enable, Interrupt. There are exceptions where silicon vendors have developed proprietary communication protocols that are still used, either for historical reasons or because of their specific advantages. An example is the 1-Wire protocol used by digital thermometers.

Moving to industrial and automotive environments, we can encounter various fieldbuses, Ethernet, **Controller Area Network (CAN)**, current loop, **Highway Addressable Remote Transducer (HART)**, **Local Interconnect Network (LIN)**, **Digital Addressable Lighting Interface (DALI)**, RS485 (e.g. for Modbus), **Meter Bus (M-Bus)**, PLC-BUS and others. Those typically use transceiver **integrated circuits (ICs)** and other circuitry, such as **transient-voltage suppressors (TVSs)**, discrete filters, galvanic isolation. They could be supported using add-on boards and additional firmware modules handling the protocol. For simplicity and to meet time constraints, the development of those boards and modules will be left for future expansions of the project.





## 2.2 Host Computer Connection

### 2.2.1 Communication Interface

**USB** shall be the primary way of connecting the module to a host **PC**. Thanks to **USB**'s flexibility, it can present itself as any kind of device or even multiple devices at once.

The most straightforward method of interfacing the board is by passing binary messages in a fashion similar to **UART**. We'll need a duplex connection to enable command confirmations, query-type commands and asynchronous event reporting. This is possible either using a "Virtual COM port" driver, or through a raw access to the corresponding **USB** endpoints. Using a raw access avoids potential problems with the operating system's driver interfering or not recognizing the device correctly; on the other hand, having GEX appear as a serial port makes it easier to integrate into existing platforms that have a good serial port support (such as National Instruments LabWindows CVI or MATLAB).

A connection using a hardware **UART** is also planned, as a fallback for boards without an **USB** connector or for platforms with no **USB** connectivity. A wireless connection to the host **PC** should also be possible and work transparently in a similar way to the **USB** or **UART** connection.

### 2.2.2 Configuration Files

The module must be easily reconfigurable. Given the settings are almost always going to be tied on the connected external hardware, it would be practical to have an option to store them permanently in the microcontroller's non-volatile memory.

We can load those settings into GEX using the serial interface, which also makes it possible to reconfigure it remotely when the wireless connection is used. With **USB**, we can additionally make the board appear as a mass storage device and expose the configuration as text files. This approach, inspired by ARM mbed's mechanism for flashing firmware images to development kits, avoids the need to create a configuration **graphical user interface (GUI)**, instead using the built-in applications of the **PC operating system (OS)**, like file explorer and notepad. We can expose additional information, such as a **README** file with instructions or a pin-out reference, as separate files on the virtual disk.

## 2.3 An Overview of Planned Features

Let's now summarize the features we wish to support in the GEX firmware, based on the preceding discussion:

- **Hardware interfacing functions**
  - I/O pin direct access (read, write), pin change interrupt
  - Analog input: voltage measurement, sampled capture
  - Analog output: static level, waveform generation

- Frequency, duty cycle, pulse length measurement
- Single pulse and PWM generation
- SPI, I<sup>2</sup>C, UART/USART
- Dallas 1-Wire
- NeoPixel (addressable light emitting diode (LED) strips)
- **Communication with the host computer**
  - USB connection as virtual serial port or direct endpoint access
  - Connection using plain UART
  - Wireless attachment
- **Configuration**
  - Fully reconfigurable, temporarily or permanently
  - Settings stored in INI files
  - File access through the communication application programming interface (API) or using a virtual mass storage

## 2.4 Microcontroller Selection

As discussed in section 1.1, this project will be based on microcontrollers from the STM32 family. The STM32F072 model was selected for the initial hardware and firmware design due to its low cost, advanced peripherals and the availability of development boards. The firmware can be ported to other microcontroller units (MCUs) later (e.g. to STM32L072, STM32F103 or STM32F303).

The STM32F072 is a Cortex M0 device with 128 KiB of flash memory, 16 KiB of random-access memory (RAM) and running at 48 MHz. It is equipped with a USB Full Speed peripheral block, a 12-bit ADC and Digital/Analog Converter (DAC), a number of general purpose timers/counters, SPI, I<sup>2</sup>C, and USART peripherals, among others. It supports crystal-less USB, using the USB SOF packet for synchronization of the internal 48 MHz RC oscillator; naturally, a real crystal resonator will provide better timing accuracy.


To effectively utilize the time available for this work, only the STM32F072 firmware will be developed while making sure the planned expansion is as straightforward as possible.

## 2.5 Form Factor Considerations


While the GEX firmware can be used with existing evaluation boards from ST Microelectronics (see figure 2.1 for an example of one such board), we wish to design and realize a few custom hardware prototypes that will be smaller and more convenient to use.

Three possible form factors are drawn in figure 2.2. The use of a common connector layout and pin assignments, here Arduino and Raspberry Pi, makes it possible to reuse

add-on boards from those platforms. When we copy the physical form factor of another product, in this example the Raspberry Pi Zero, we can further take advantage of existing enclosures designed for it.

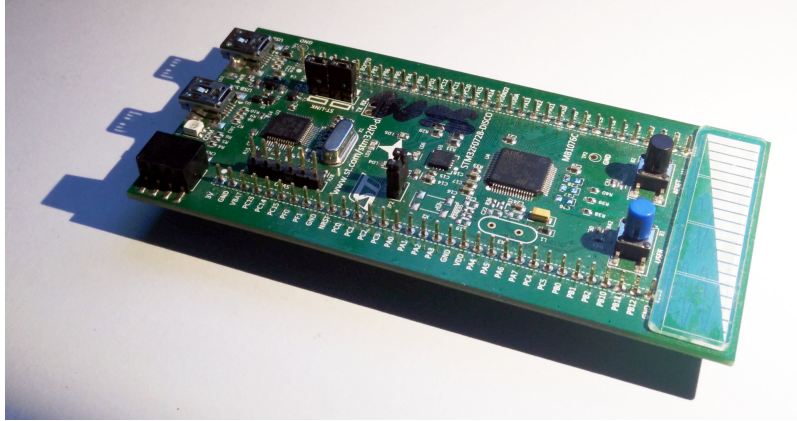

**Figure 2.1:** A Discovery development board with the STM32F072 microcontroller

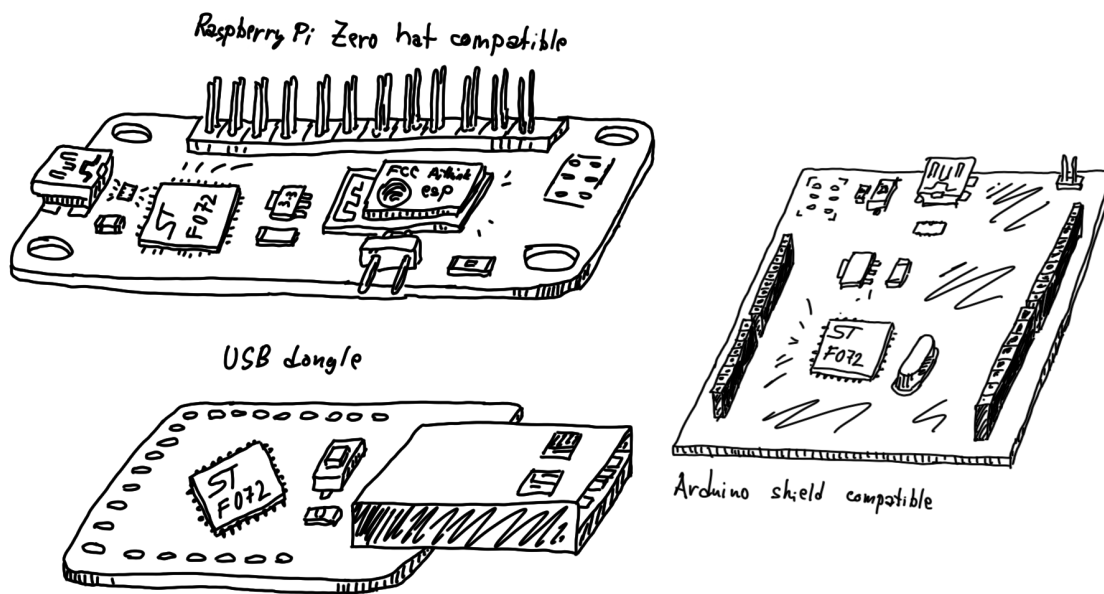

**Figure 2.2:** A sketch of three possible form factors for the GEX hardware prototype. Note the ESP8266 module which was considered as an option for wireless access but was eventually not used due to its high current usage, unsuitable for battery operation.




## Chapter 3


### Existing Solutions

The idea of making it easier to interact with low level hardware from a PC is not new. Several solutions to this problem have been developed, each with its own advantages and drawbacks. Some examples will be presented in this chapter.

#### 3.1 Raspberry Pi

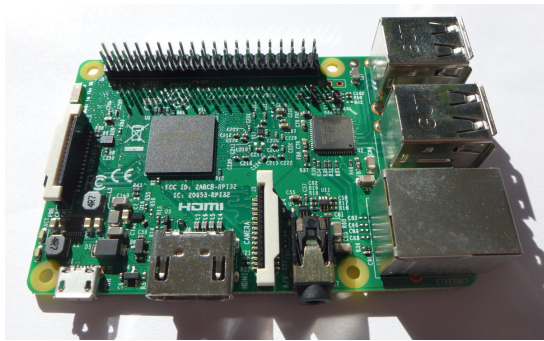

(a) : Raspberry Pi 3 Model B

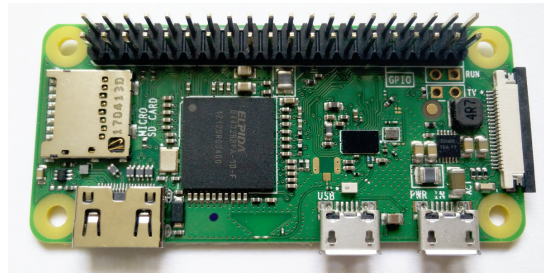

(b) : Raspberry Pi Zero W


Figure 3.1: Raspberry Pi minicomputers

The Raspberry Pi's **GPIO** header, a row of pins which can be directly controlled by user applications running on the minicomputer, was one of the inspirations behind GEX. It can be controlled using C and Python (among others) and offers **GPIO**, **SPI**, **I<sup>2</sup>C**, **UART** and **PWM**, with other protocols and functions easy to emulate thanks to the high speed of the system processor.

The Raspberry Pi is used in schools as a low-cost PC alternative that encourage students' interest in **Science, Technology, Engineering and Mathematics (STEM)**. The board is often built into more permanent projects that make use of its powerful processor, such as wildlife camera traps, fish feeders etc.

The Raspberry Pi could be used for the same quick evaluations or experiments we want to perform with GEX, however they would either have to be performed directly on the mini-computer, with an attached monitor and a keyboard, or use some form of remote access (e.g. **Secure Shell (SSH)**, screen sharing).

## 3.2 Bus Pirate

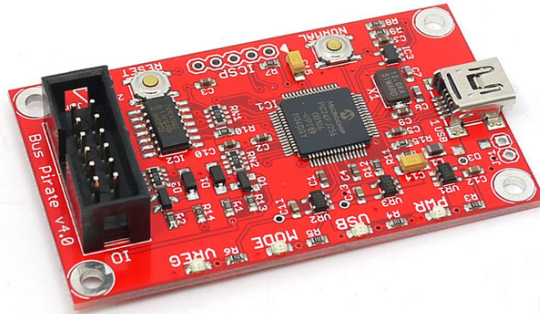

**Figure 3.2:** Bus Pirate v.4 (photo taken from [1])

Bus Pirate, a project by Ian Lesnet, is a USB-attached device providing access to hardware interfaces like **SPI**, **I<sup>2</sup>C**, **USART** and 1-Wire, as well as frequency measurement and direct pin access. The board aims to make it easy for users to familiarize themselves with new chips and modules; it also provides a range of programming interfaces for flashing microcontroller firmwares and memories. It communicates with the **PC** using a FTDI USB-serial bridge.

Bus Pirate is open source and is, in its scope, similar to GEX. It can be scripted and controlled from the PC, connects to USB and provides a wide selection of hardware interfaces.

The board is based on a PIC16 microcontroller running at 32 MHz. Its **ADC** only has a resolution of 10 bits (1024 levels). There is no **DAC** available on the chip, which makes applications that require a varied output voltage more difficult to implement. Another limitation of the board is its low number of **GPIO** pins, which may be insufficient for certain applications. The Bus Pirate is available for purchase at around 30 USD, a price comparable to some Raspberry Pi models.

## 3.3 Professional DAQ Modules

Various professional tools that would fulfill our needs exist on the market, but their high price makes them inaccessible for users with a limited budget, such as hobbyists or students who would like to keep such a device for personal use. An example is the National Instruments I<sup>2</sup>C/SPI Interface Device which also includes several **GPIO** lines, their USB DAQ module, or some of the Total Phase I<sup>2</sup>C/SPI gadgets (figure 3.3).

The performance GEX can provide may not always match that of those professional tools, but in many cases it'll be a sufficient substitute at a fraction of the cost.



(a) : NI I<sup>2</sup>C/SPI Interface Device

(b) : NI USB DAQ module



(c) : Total Phase SPI/I<sup>2</sup>C Host "Aardvark"

**Figure 3.3:** An example of professional tools that GEX could replace in less demanding scenarios (pictures taken from marketing materials: [2, 3, 4])







## **Part II**

### **Theoretical Background**




## Chapter 4

# Universal Serial Bus

This chapter presents an overview of the **Universal Serial Bus (USB)** Full Speed interface, with focus on the features used in the GEX firmware. **USB** is a versatile and powerful interface which replaces several older technologies; for this reason its specification is very complex and going into all details is hardly possible. We will cover the basic principles and terminology of **USB** and focus on the parts relevant for the GEX project. More information about the bus can be found in the official specification [5], related documents published by the USB Implementers Forum, and other on-line resources [6, 7].

### 4.1 Basic Principles and Terminology

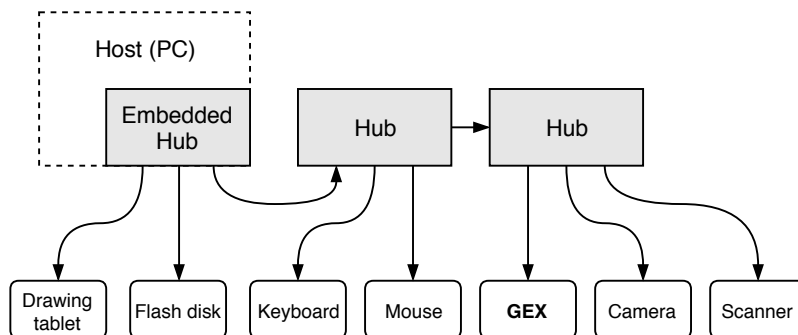


**Figure 4.1:** The hierarchical structure of the USB bus

**USB** is a hierarchical bus with a single master (*host*) and multiple slave devices. A **USB** device that provides functionality to the host is called a *function* [8].

#### 4.1.1 Pipes and Endpoints

Communication between the host and a function is organized into virtual channels called *pipes* connecting to the device's *endpoints*, identified by endpoint numbers.

Endpoints can be either unidirectional or bidirectional; the direction from the host to a function is called **OUT**, the other direction (function to the host) is called **IN**. A bidirectional endpoint is technically composed of a **IN** and **OUT** endpoint with the same number. All transactions (both **IN** and **OUT**) are initiated by the host; functions have to wait for their turn. Endpoint 0 is bidirectional, always enabled, and serves as a *control endpoint*. The

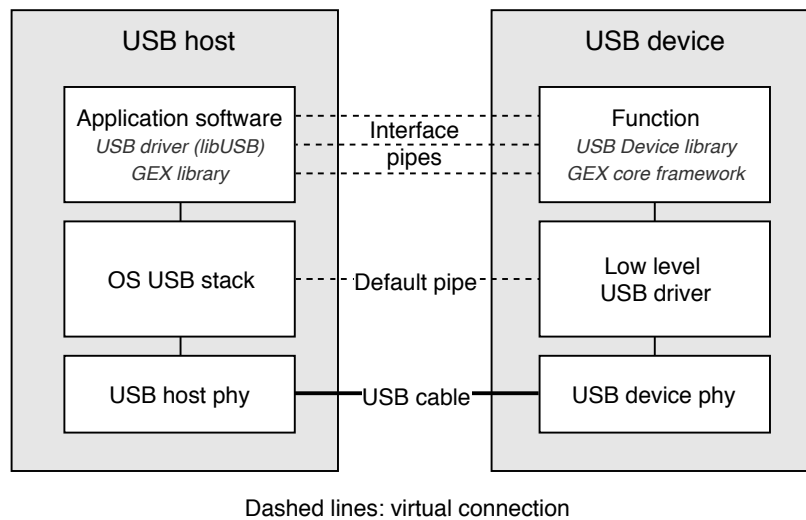

**Figure 4.2:** The logical structure of USB

host uses the control endpoint to read information about the device and configure it as needed.

### ■ 4.1.2 Transfer Types

There are four types of data transfers defined in **USB**: control, bulk, isochronous, and interrupt. Each endpoint is configured for a fixed transfer type:

- *Control* - initial configuration after device plug-in; also used for other application-specific control messages that can affect other pipes.
- *Bulk* - used for burst transfers of large messages, commonly e.g. for mass storage devices
- *Isochronous* - streaming with guaranteed low latency; designed for audio or video streams where some data loss is preferred over stuttering
- *Interrupt* - low latency short messages, used for human interface devices like mice and keyboards

### ■ 4.1.3 Interfaces and Classes

The function's endpoints are grouped into *interfaces*. An interface describes a logical connection of endpoints, such as the reception and transmission endpoints that belong together. An interface is assigned a *class* defining how it should be used.

Standard classes are defined by the USB specification [9] to provide a uniform way of interfacing devices of the same type, such as human-interface devices (mice, keyboards, gamepads) or mass storage devices. The use of standard classes makes it possible to re-use the same driver software for devices from different manufacturers.

The class used for the GEX's "virtual COM port" function was originally meant for telephone modems, a common way of connecting to the Internet at the time the first versions of USB were developed. A device using this class will show as `/dev/ttyACMO` on Linux and as a COM port on Windows, provided the system supports it natively or the right driver is installed.

#### ■ 4.1.4 Descriptors

USB devices are introspectable, that is, the host can learn about a newly connected device automatically by probing it, without any user interaction. This is accomplished using a *descriptor table*, a binary structure stored in the function and read by the host through the control endpoint (default pipe) after the device is attached.

Each descriptor starts with a declaration of its length (in bytes), followed by its type, allowing the host to skip unknown descriptors without having to discard the rest of the table. The descriptors are logically nested and form a tree-like structure, but they are stored sequentially in the descriptor table and the lengths do not include sub-descriptors.

The topmost descriptor holds information about the entire function, including the vendor and product IDs which uniquely identifies the device model. It is followed by a Configuration descriptor, grouping a set of interfaces. More than one configuration may be present and available for the host to choose from; however, this is rarely used or needed. Each configuration descriptor is followed by one or more interface descriptors, each with its class-specific sub-descriptors and/or endpoint descriptors.

The descriptor table used by GEX is captured in figure 4.3 for illustration. The vendor and product IDs were obtained from the pid.codes repository [10] providing free product codes to open source projects. The official way of obtaining the unique code involves high recurring fees (\$4000 per annum) to the USB Implementers Forum, Inc. and is therefore not affordable for non-commercial use; alternatively, a product code may be obtained from some **MCU** vendors if their product is used in the device.




## 4.2 USB Physical Layer

USB uses differential signaling with **Non Return to Zero Inverted (NRZI)** encoding and bit stuffing (the insertion of dummy bits to prevent long intervals in the same **direct current (DC)** level). The encoding, together with frame formatting, checksum verification, retransmission, and other low level aspects of the USB connection are entirely handled by the USB physical interface block in the microcontroller's silicon. Normally we do not need to worry about those details; nonetheless, a curious reader may find more information in chapters 7 and 8 of [5]. What needs our attention are the electrical characteristics of the physical connection, which need to be understood correctly for a successful schematic and PCB design.

The USB cable contains 4 conductors:  $V_{BUS}$  (+5 V), D+, D-, and **ground (GND)**. The data lines, D+ and D-, are also commonly labeled DP and DM. This differential pair should be routed in parallel on the PCB and kept at the same length.

USB versions that share the same connector are backwards compatible. The desired bus speed is requested by the device using a 1.5 k $\Omega$  pull-up resistor to 3.3 V on one of the data lines: D+ pulled high for Full Speed (shown in figure 4.4), D- pulled high for Low Speed. The polarity of the differential signals is also inverted depending on the used speed, as the idle level changes. Some microcontrollers integrate the correct pull-up resistor inside the USB peripheral block (including out STM32F072), removing the need for an external resistor.

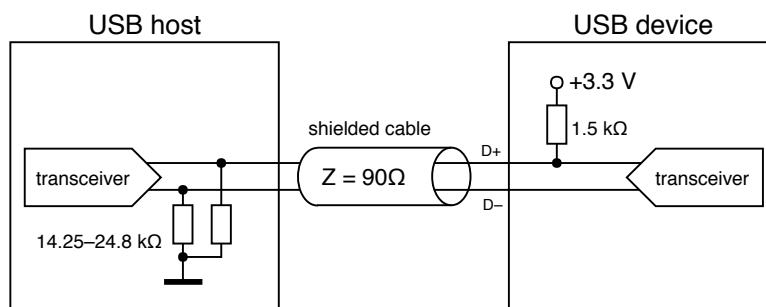

**Figure 4.4:** Pull-up and pull-down resistors near the host and a Full Speed function, as prescribed by the USB specification rev. 2.0

When a function needs to be re-enumerated by the host, which causes a reload of the descriptor table and the re-attachment of software drivers, it can momentarily remove the pull-up resistor, which the host will interpret as if the device was disconnected. With an internal pull-up, this can be done by flipping a bit in a control register. An external resistor may be connected through a transistor controlled by a GPIO pin. As discussed in [11], a GPIO pin might be used to drive the pull-up directly, though this has not been verified by the author.

The  $V_{BUS}$  line supplies power to *bus-powered* devices. *Self-powered* devices can leave this pin unconnected and instead use an external power supply. The maximal current drawn from the  $V_{BUS}$  line is configured using a descriptor and should not be exceeded, but experiments suggest this is often not enforced.





which defines control commands. Three endpoints are used: bulk IN, bulk OUT, and interrupt OUT.

The interrupt endpoint is used for control commands, such as toggling the auxiliary lines of RS-232 or setting the baud rate. Since GEX does not translate the data communication to any physical UART, those commands are not applicable and can be silently ignored.

An interesting property of the **CDC** class is that the bulk endpoints transport raw data without any wrapping frames. By changing the interface's class in the descriptor table to 255 (*Vendor Specific Class*), we can retain the messaging functionality of the designated endpoints, while accessing the endpoints device directly using e.g. libUSB, without any interference from the **OS**. This approach is also used to hide the **MSC** interface when its not needed.

### 4.3.3 Interface Association: Composite Class

Since its creation, the **USB** specification expected that each function will have only one interface enabled at a time. After it became apparent that there is a need for having multiple unrelated interfaces work in parallel, the **Interface Association Descriptor (IAD)** [17] was introduced as a workaround.

The **IAD** is an entry in the descriptor table that defines which interfaces belong together and should be handled by the same software driver. To use the **IAD**, the function's class must be set to 239 (0xEF), subclass 2 and protocol 1 in the top level descriptor, so that the **OS** knows to look for this descriptor before binding drivers to any interfaces.

In GEX, the **IAD** is used to tie together the **CDC** and **ACM** interfaces while leaving out the **MSC** interface which should be handled by a different driver. To make this work, a new *composite class* had to be created as a wrapper for the library-provided **MSC** and **CDC/ACM** implementation.



## Chapter 5

# FreeRTOS

FreeRTOS is a free, open-source real time operating system kernel targeted at embedded systems and ported to many different microcontroller architectures [18]. FreeRTOS provides the task scheduler, forming the central part of the RTOS, and implements queues, semaphores, and mutexes for message passing and synchronization between concurrent tasks (summarily called synchronization objects<sup>1</sup>). FreeRTOS is compact and designed to be easy to understand; it's written in C, with the exception of some architecture-specific routines which use assembly. A complete overview of the system is available in the FreeRTOS reference manual [19] and its guide book [20].

FreeRTOS is used in GEX for its synchronization objects that make it easy to safely pass messages between interrupts and working threads, without deadlocks or race conditions. The built-in stack overflow protection helps with a more efficient memory allocation, and the heap allocator provided by FreeRTOS enables a thread-safe dynamic allocation with a shared heap.

### 5.1 Basic FreeRTOS Concepts and Functions

#### 5.1.1 Tasks

Threads in FreeRTOS are called *tasks*. Each task is assigned a memory area to use as its stack space, and a holding structure with its name, saved *context*, and other metadata used by the kernel. A task context includes the program counter, stack pointer and other register values. Task switching is done by saving and restoring this context by manipulating the values on the stack before leaving and interrupt. The FreeRTOS website provides an example with the AVR port [21] demonstrating how its internal functionality is implemented, including the context switch.

At start-up the firmware initializes the kernel, registers tasks to run and starts the scheduler. From this point onward the scheduler is in control and runs the tasks using a round robin scheme, always giving a task one tick of run time (usually 1 ms) before interrupting it. Which task should run is primarily determined by their priority numbers, but there are other factors.

---

<sup>1</sup>In this chapter sometimes simply called “objects”.



- **Counting semaphores** are used to represent available resources. A pool of software or hardware resources is accompanied by a counting semaphore, so that tasks can wait for a resource to become available in the pool and then subtract the semaphore value. After finishing with a resource, the semaphore is incremented again and another task can use it.
- **Mutexes** (locks), unlike semaphores, must be taken and released in the same thread (task). They're used to guard exclusive access to a resource, such as writing to a serial port, or accessing a shared memory. When a mutex is taken, a different task which needs to use it enters the Blocked state and is resumed once the mutex becomes available (at which point the task is resumed and simultaneously takes it).
- **Queues** are used for passing messages between tasks, or from interrupts to tasks. Both sending and receiving of queue messages can block the task until the operation becomes possible. A queue handling task is often simply a loop which tries to read from the queue with an infinite timeout and processes the received data once the reading succeeds.

It must be noted that synchronization objects like mutexes and semaphores can help combat concurrent access only when used consistently and correctly. A locked mutex can't guard against a rogue task accessing the protected resource without checking.

## 5.2 Stack Overflow Protection

Each task in FreeRTOS is assigned a block of **RAM** to use as its stack when it runs. This is where the stack pointer is restored to in the context switch. It can happen that an insufficient stack is exceeded and the stack pointer moves outside the designated area. Without countermeasures this would mean that we are overwriting bytes in some unrelated memory structure, perhaps another task's control block or a stack.

A stack overflow protection can be enabled by a flag in the FreeRTOS configuration file (more details in [22]). This function works in two ways: the more obvious is a simple check that the stack pointer remains in the designated area; however, as the check may be performed only in the scheduler interrupt, it can happen that the stack pointer exceeds the bounds only temporarily and returns back before the stack can be checked for overflow. The stack is thus filled with a known filler value before starting the task, and the last few bytes are then tested to match this value. Not only can we detect a stack overflow more reliably, this feature also makes it possible to estimate the peak stack usage by counting the remaining filler values in the stack area. Naturally, we can't distinguish between the original filler values and the same value stored on the stack; still, this method proves remarkably successful in the detection of misconfigured stack size.



## Chapter 6

# The FAT16 File System and Its Emulation

A **file system (FS)** is used by GEX to provide a comfortable access to the configuration files. By emulating a Mass Storage **USB** device, the module appears as a thumb drive on the host **PC**, and the user can edit its configuration using their preferred text editor. The FAT16 file system was selected for its simplicity and a good cross-platform support [23].

Three variants of the **File Allocation Table (FAT)** file system exist: FAT12, FAT16, and FAT32. FAT12 was used on floppy disks and it is similar to FAT16, except for additional size constraints and a **FAT** entry packing scheme. FAT16 and FAT32 are FAT12's later developments from the time when hard disks became more common and the old addressing scheme couldn't support their larger capacity.

This chapter will explain the structure of FAT16 and the challenges faced when trying to emulate it without a physical data storage.

## 6.1 The General Structure of the FAT File System

An overview will be presented here without going into too many details that would overwhelm the reader and can be looked up elsewhere. Several resources [24, 25, 26, 27, 28] were consulted during the development of the GEX firmware which provide a more complete description of the FAT16 file system, with [28], the Microsoft white paper, giving the most detailed overview.

The storage medium is organized into *sectors* (or *blocks*), usually 512 bytes long. Those are the smallest addressing unit in the disk structure. The disk starts with a *boot sector*, also called a **master boot record (MBR)**. That is followed by optional reserved sectors, one or two copies of the file allocation table, and the root directory. All disk areas are aligned to a sector boundary:

### 6.1.1 Boot Sector

This is a 1-sector structure which holds the **OS** bootstrap code for bootable disks. The first 3 bytes are a jump instruction to the actual bootstrap code located later in the sector. What matters to us when implementing the file system is that the boot sector also contains data fields describing how the disk is organized, what file system is used, who formatted it, etc. The size of the **FAT** and the root directory is defined here. The exact structure of the

Disk area	Size / Notes
Boot sector	1 sector
Reserved sectors	optional
FAT 1	1 or more sectors, depends on disk size
FAT 2	optional, a back-up copy of FAT 1
Root directory	1 or more sectors
Data area	Organized in <i>clusters</i>

**Table 6.1:** Areas of a FAT-formatted disk

boot sector can be found in either of [24, 25, 26, 27, 28] or in the attached GEX source code.

### 6.1.2 File Allocation Table

The data area of the disk is organized in clusters, logical allocation units composed of groups of sectors. The use of a larger allocation unit allows the system to use shorter addresses and thus support a larger disk capacity.

The **FAT** acts as a look-up table combined with linked lists. In FAT16, it is organized in 16-bit fields, each corresponding to one cluster. The first two entries in the allocation table are reserved and hold special values set by the disk formatter and the host **OS**: a “media descriptor” 0xFFFF8 and a “clean/dirty flag” 0xFFFF/0x3FFF.

Files can span multiple clusters; each **FAT** entry either holds the address of the following file cluster, or a special value:

- 0x0000 - free cluster
- 0xFFFF - last cluster of the file (still including file data)
- 0xFFF7 - bad cluster

The bad cluster mark, 0xFFF7, is used for clusters which are known to corrupt data due to a flaw in the storage medium, such as a bad memory cell.

### 6.1.3 Root Directory

The root directory has the same structure as any other directories, which reside in clusters the same way like ordinary files. The difference is that the root directory is allocated when the disk is formatted and it has a fixed and known position and size. Sub-directories are stored on the disk in a way similar to regular files, therefore they can span multiple sectors and their file count can be much larger than that of the root directory.

A directory is organized in 32-byte entries representing individual files. Table 6.2 shows the structure of one such entry. The name and extension fields form together the well-known 8.3 filename format (referring to the byte size of the first two entries). Longer file names



Offset	Size (bytes)	Description
0	8	File name (padded with spaces)
8	3	File extension
11	1	File attributes
12	10	Reserved
22	2	Creation time
24	2	Creation date
26	2	Address of the first cluster
28	4	File size (bytes)

**Table 6.2:** Structure of a FAT16 directory entry

are encoded using a **Long File Name (LFN)** scheme [29] as special hidden entries stored in the directory table alongside the regular 8.3 entries, ensuring backward compatibility.

The first byte of the file name has a special meaning:

- 0x00 - indicates that there are no more files when searching the directory
- 0xE5 - marks a free slot; this is used when a file is deleted
- 0x05 - indicates that the first byte should actually be 0xE5, a code used in some character sets at the time, and the slot is *not* free<sup>1</sup>.
- Any other value, except 0x20 (space) and characters forbidden in a DOS file name, starts a valid file entry. Generally, only space, A-Z, 0-9, - and \_ should be used in file names for maximum compatibility.


The attributes field contains flags such as *directory*, *volume label*, *read-only* and *hidden*. Volume label is a special entry in the root directory, which defines the disk's label shown on the host PC. A file with the directory bit set is actually a pointer to a subdirectory, meaning that when we open the linked cluster, we'll find a new directory table.

Figure 6.1 shows a possible organization of the GEX file system with two INI files, one spanning two clusters, the other being entirely inside one. The clusters need not be used completely; an exact file size is stored in the directory entries.

## 6.2 FAT16 Emulation

The FAT16 file system is relatively straightforward to implement. However, it is not practical or even possible to keep the entire file system in memory on a small microcontroller like

<sup>1</sup>The special meaning of 0xE5 appears to be a correction of a less than ideal design choice earlier in the development of the file system

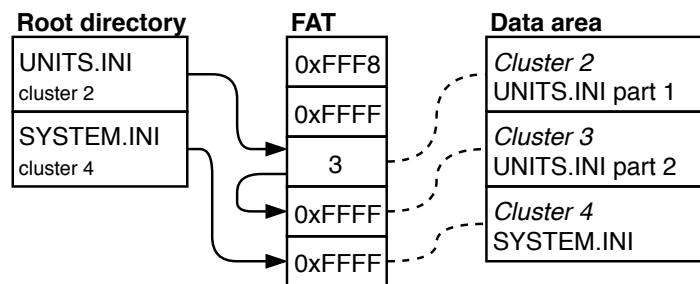

**Figure 6.1:** An example of the GEX virtual file system

our STM32F072. This means that we have to generate and parse disk sectors and clusters on-demand, when the host reads or writes them. The STM32 [USB Device](#) library helpfully implements the [MSC](#) and provides [API](#) endpoints to which we connect our file system emulator. Specifically, those are requests to read and write a sector, and to read disk status and parameters, such as its size.

### 6.2.1 DAPLink Emulator

A FAT16 emulator was developed as part of the open-source Arm Mbed DAPLink project [30]. It is used there for a drag-and-drop flashing of firmware images to the target microcontroller, taking advantage of the inherent cross-platform support (it uses the same software driver as any thumb drive, as discussed in 4.3.1). Arm Mbed also uses a browser-based [integrated desktop environment \(IDE\)](#) and cloud build servers, thus the end user does not need to install or set up any software to program a compatible development kit.

The GEX firmware adapts several parts of the DAPLink code, optimizing its [RAM](#) usage and porting it to work with FreeRTOS. Those modified files are located in the folder `User/vfs` of the GEX source code repository; the original Apache 2.0 open source software license headers, as well as file names, have been retained.

### 6.2.2 Handling a Read Access

As shown in table 6.1, the disk consists of several areas. The boot sector is immutable and can be stored in and read from the Flash memory. The handling of the other disk areas ([FAT](#), data area) depends on the type of access: read or write.

The user can only read files that already exist on the disk, in our case, `UNITS.INI` and `SYSTEM.INI`. Those files are generated from the binary settings storage, and conversely, parsed, line-by-line, without ever existing in their full form. This fact makes our task more challenging, as the files can't be easily measured and there's no obvious way to read a sector from the middle of a longer file. We solve this by implementing two additional functions in the INI file writer: a *read window* and a *dummy read mode*.

A read window is a byte range which we wish to generate. The INI writer discards bytes before the start of the read window, writes those inside the window to our data buffer, and stops when its end is reached. This lets us extract a sector from anywhere in a file.

The second function, dummy read, is tied to the window function: we set the start index so high that it's never reached (e.g. 0xFFFFFFFF), and have the writer count discarded characters. When the dummy file generation ends, this character counter holds its size.

Now, just one problem remains: how to tell which sectors contain which part of our files? This is straightforward when we realize that the files change only when the user modifies the settings. After each such change, an algorithm is run which allocates clusters to the files and preserves this information in a holding structure. A subsequent read access simply requires a look into this structure and the corresponding chunk of a file may be served using the read window function. The **FAT** can be dynamically generated from this information as well.

### ■ 6.2.3 Handling a Write Access

A write access to the disk is more challenging to emulate than a read access, as the host OS tends to be somewhat unpredictable. In GEX's case we are interested only in the action of overwriting an already existing file, but it is interesting to also analyze other actions the host may perform.

It must be noted that due to the nonexistence of a physical storage medium, it's not possible to read back a file the host has previously written, unless we store or re-generate its content when such a read access occurs. The **OS** may show the written file on the disk, but when the user tried to read it, the action either fails, or shows a cached copy. The emulator would work around this problem by temporarily reporting that the storage medium has been removed, forcing the host to re-load its contents.

### ■ File Deletion

A file is deleted by:

1. Marking all sectors used by it as free in the **FAT**
2. Replacing the first character of its name in the directory table by 0xE5 to indicate the slot is free

From the perspective of emulation, we can ignore the **FAT** access and only detect writes to the directory sectors. This is slightly more complicated when one considers that all disk access is performed in sectors: the emulator must compare the written data with the original bytes to detect what change has been performed. Alternatively, we could parse the entire written sector as a directory table and compare it with our knowledge of its original contents.

### ■ 6.2.4 File Name Change

A file is renamed by modifying its directory entry. In the simple case of a short, 8.3 file name, this is an in-place modification of the file entry. Long file names, using the **LFN** extension, are a complication, as the number of non-file entries holding the long file name might change, and subsequently the following entries in the table may shift or be re-arranged.




# Chapter 7

## Supported Hardware Buses

Hardware buses implemented in GEX are presented in this chapter. The description of each bus is accompanied by several examples of devices that can be interfaced with it. The reader is advised to consult the official specifications and particular devices' datasheets for additional details.

### 7.1 UART and USART

The **Universal Synchronous/Asynchronous Receiver/Transmitter (USART)** has a long history and is still in widespread use today. It is the protocol used in RS-232, which was once a common way of connecting modems, printers, mice and other devices to personal computers. RS-232 can be considered the ancestor of **USB** in its widespread availability and use. **UART** framing is also used in the industrial bus RS-485 and the automotive interconnect bus **LIN**.

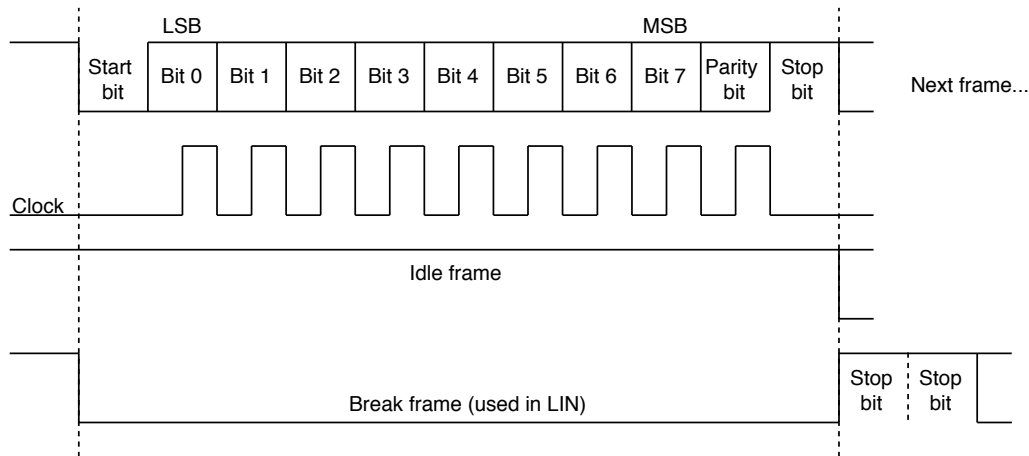


**Figure 7.1:** USART frame format in the 8-bit configuration with parity


**UART** and **USART** are two variants of the same interface. **USART** includes a separate clock signal, while the **UART** timing relies on a well-known clock speed and the bit clock is synchronized by start bits. **USART** was historically used in modems to achieve higher bandwidth, but is now mostly obsolete.

**USART**, as implemented by microcontrollers such as the STM32 family, is a two-wire full duplex interface that uses 3.3 V or 5 V logic levels. The data lines are in the high logical



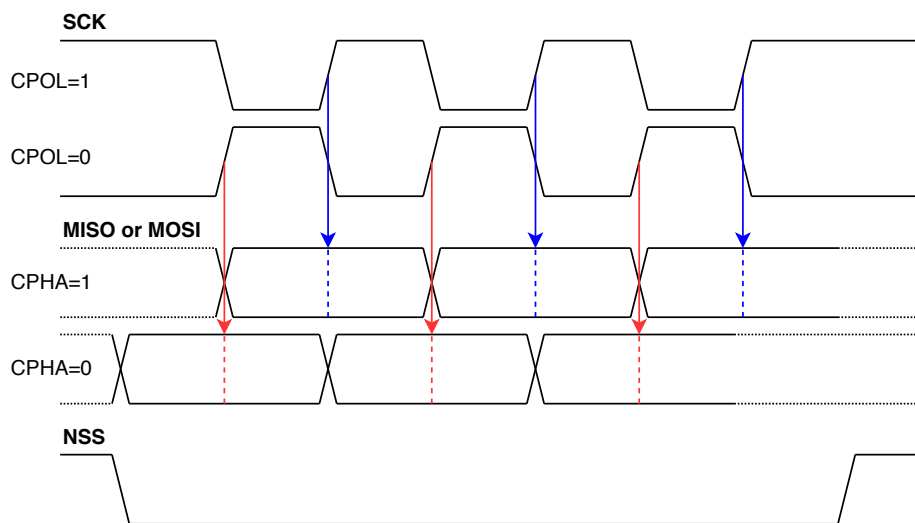

**Figure 7.2:** SPI timing diagram explaining the CPOL and CPHA settings (shown on 3 data bits; a real message will use at least 8 bits)

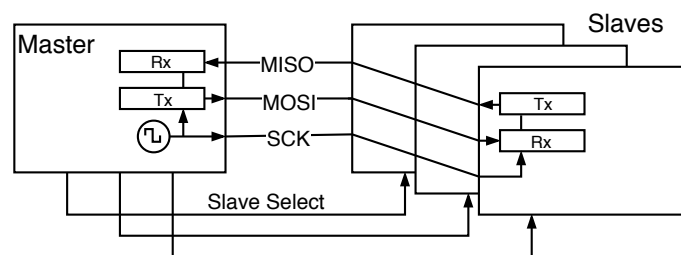

**Figure 7.3:** A SPI bus with 1 master and 3 slaves, each enabled by its own Slave Select signal

### 7.2.1 Examples of Devices Using SPI

- **SX1276** - LoRa transceiver
- **nRF24L01+** - 2.4 GHz ISM band radio module
- **L3GD20** - 3-axis gyroscope
- **BMP280** - pressure sensor
- **BME680** - air quality sensor
- **ENC28J60** - Ethernet controller
- **L6470** - intelligent stepper motor driver
- **AD9833** - waveform generator (**MOSI** only)
- **ADE7912** - triple  $\Sigma$ - $\Delta$  **ADC** for power metering applications
- **SD cards** [32]
- SPI-interfaced EEPROM and Flash memories

## 7.3 I<sup>2</sup>C


**Inter-Integrated Circuit (I<sup>2</sup>C)** is a two-wire, open-drain bus that supports multi-master operation. It uses two connections (plus GND): **Serial Data Line (SDA)** and **Serial Clock Line (SCL)**, both open-drain with a pull-up resistor.

The protocol was developed by Philips Semiconductor (now NXP Semiconductors) and its implementors were required to pay licensing fees, until 2006, leading to the development of compatible implementations with different names, such as Atmel’s **Two-Wire Interface (TWI)** or Dallas Semiconductor’s “Serial 2-wire Interface” (e.g. used in the DS1307 **real-time clock (RTC)** chip). I<sup>2</sup>C is a basis of the **System Management Bus (SMBus)** and **Power Management Bus (PMBus)**, which add additional constraints and rules for a more robust operation.

The frame format is shown and explained in figure 7.4; more details may be found in the specification [33] or application notes and datasheets offered by chip vendors, such as the white paper from Texas Instruments [34]. A frame starts with a start condition and stops with a stop condition, defined by an SDA edge while the SCL is high. The address and data bytes are acknowledged by the slave by sending a 0 on the open-drain SDA line in the following clock cycle. A slave can terminate the transaction by sending 1 in place of the acknowledge bit. Slow slave devices may stop the master from sending more data by holding the SCL line low at the end of a byte, a feature called *Clock Stretching*. As the bus is open-drain, the line can’t go high until all participants release it.

Two addressing modes are defined: 7-bit and 10-bit. Due to the small address space, exacerbated by many devices implementing only the 7-bit addressing, collisions between different chips on a shared bus are common; many devices thus offer several pins to let the board designer choose a few bits of the address by connecting them to different logic levels.

The bus supports multi-master operation, which leads to the problem of collisions. Multi-master capable devices must implement a bus arbitration scheme as specified by the I<sup>2</sup>C standard [33]. This feature is not used often in intelligent sensors and modules; the most common topology is multi-drop single-master, similar to SPI, with the advantage of using only two pins on the microcontroller.

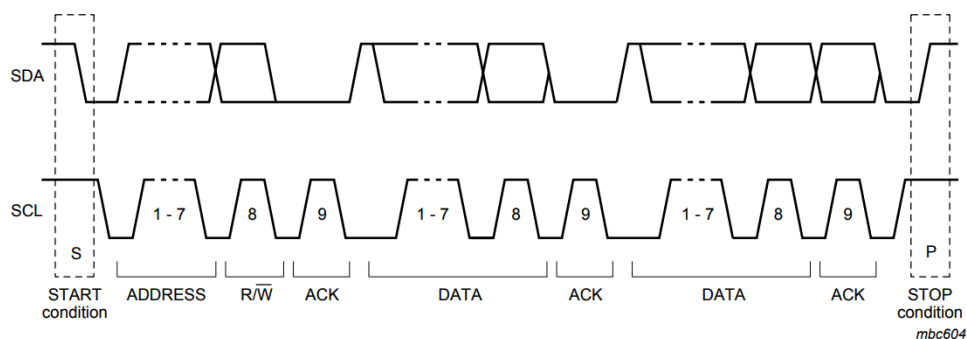

**Figure 7.4:** An I<sup>2</sup>C message diagram (taken from the I<sup>2</sup>C specification [33])



### 7.3.1 Examples of Devices Using I<sup>2</sup>C


- **APDS-9960** - ambient light, proximity and gesture sensor
- **L3GD20, BMP280, BME680** - listed as **SPI** devices, those also support **I<sup>2</sup>C**
- **DS1307** - **RTC**; **I<sup>2</sup>C** is not mentioned in the entire datasheet, presumably to avoid paying license fees, but it is fully compatible
- **IS31FL3730** - a **LED** matrix driver
- The **Serial Camera Control Bus (SCCB)** used to configure camera modules is derived from **I<sup>2</sup>C**

## 7.4 1-Wire

The 1-Wire bus, developed by Dallas Semiconductor (acquired by Maxim Integrated), uses a single, bi-directional data line, which can also power the slave devices in a *parasitic mode*, reducing the number of required wires to just two (compare with 3 in **I<sup>2</sup>C** and 5 in **SPI**, all including **GND**). The parasitic operation is possible thanks to the data line resting at a logic high level most of the time, charging an internal capacitor.

1-Wire uses an open-drain connection for the data line, similar to **I<sup>2</sup>C**, though the protocol demands it to be connected directly to  $V_{dd}$  in some places when the parasitic mode is used; this is accomplished using an external transistor, or by reconfiguring the GPIO pin as output and setting it to 1, provided the microcontroller is able to supply a sufficient current.

The communication consists of short pulses sent by the master and (for bit reading) the line continuing to be held low by the slave for a defined amount of time. The pulse timing determines whether it is a read or write operation and which value is encoded. It can be implemented either in software as delay loops, or by abusing **UART** peripheral, as explained in [35]. Detailed timing diagrams can be found in the DS18x20 [36]. 1-Wire transactions include a checksum byte to ensure an error-free communication.

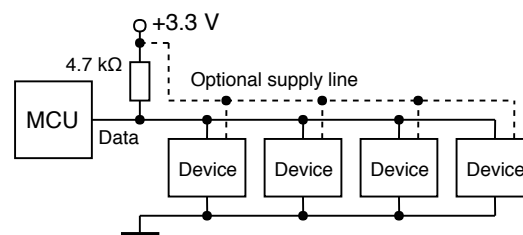

**Figure 7.5:** 1-Wire connection topology with four slave devices

Devices are addressed by their unique 64-bit ID numbers called ROM codes or ROMs; they can be found by the bus master, with a cooperation from slaves, using a ROM Search algorithm. The search algorithm is explained in [37], including a possible implementation example. If only one device is connected, a wild card command Skip ROM can be used to address the device without a known ROM code.

### 7.4.1 Examples of Devices Using 1-Wire

- **DS1820, DS18S20, DS18B20** - digital thermometers
- **iButton** - contact-read access tokens, temperature loggers, etc.


Since 1-Wire is a proprietary protocol, there is a much smaller choice of available devices and they also tend to be more expensive. The DS18x20 thermometers are, however, popular enough to warrant the bus's inclusion in GEX.

## 7.5 NeoPixel

NeoPixel is a marketing name of the **WS2812** and compatible intelligent **LED** drivers that are commonly used in “addressable **LED** strips”. Details about the protocol may be found in the WS2812B datasheet [38]. Those chips include the control logic, PWM drivers and the **LED** diodes all in one 5×5 mm SMD package.

The NeoPixel protocol is unidirectional, using only one data pin. The **LED** drivers are chained together. Ones and zeros are encoded by pulses of a defined length on the data pin; after the color data was loaded into the **LED** string, a longer "reset" pulse (low level) is issued by the bus master and the set colors are displayed. The timing constraints are listed in table 7.1.

The NeoPixel timing is sensitive to pulse length accuracy; a deviation from the specified timing may cause the data to be misinterpreted by the drivers. Some ways to implement the timing use hardware timers or the **Inter-IC Sound (I<sup>2</sup>S)** peripheral. An easier method that does not require any additional hardware resources beyond the **GPIO** pin is to implement the timing using delay loops in the firmware; care must be taken to disable interrupts in the sensitive parts of the timing; it may be advantageous to implement it in assembly for a tighter control.

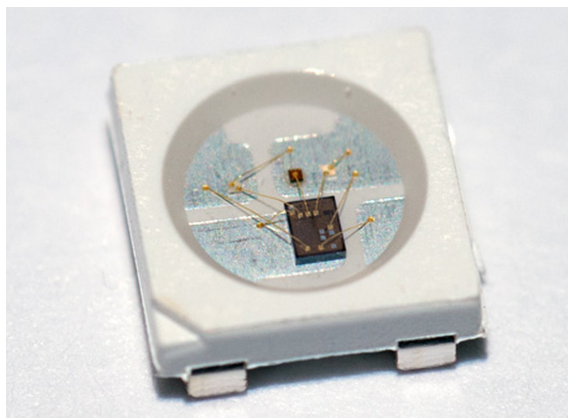

**Figure 7.6:** A close-up photo of a WS2812B pixel, showing the LED driver IC

Bit value	Constraint	Duration
0	High level	$0.4 \mu\text{s} \pm 150\text{ns}$
0	Low level	$0.85 \mu\text{s} \pm 150\text{ns}$
1	High level	$0.45 \mu\text{s} \pm 150\text{ns}$
1	Low level	$0.8 \mu\text{s} \pm 150\text{ns}$
–	Reset pulse (low)	$> 50 \mu\text{s}$

**Table 7.1:** NeoPixel pulse timing



## Chapter 8

### Non-communication Hardware Functions

In addition to communication buses, described in chapter 7, GEX implements several measurement and output functions that take advantage of the microcontroller's peripheral blocks, such as timers/counters and DAC. The more complicated ones are described here; simpler functions, such as the raw GPIO access, will be described later together with their control API.

#### 8.1 Frequency Measurement

Applications like motor speed measurement and the reading of a voltage-controlled oscillator (VCO) or VCO-based sensor's output demand a tool capable of measuring frequency. This can be done using a laboratory instrument such as the Agilent 53131A. A low cost solution is to use a timer/counter peripheral of a microcontroller.

Two basic methods to measure frequency exist [39], each with its advantages and drawbacks:

- The *direct method* (fig. 8.1) is based on the definition of frequency as a number of cycles  $n$  in a fixed-length time window  $\tau$  (usually 1 s); the frequency is then calculated as  $f = n/\tau$ .

One timer generates the time window and its output gates the input of another, configured as a pulse counter. At the end of the measurement window an interrupt is generated and we can read the pulse count from the counter's register.

The direct method has a resolution of 1 Hz with a sampling window of 1 s (only a whole number of pulses can be counted). The resolution can be increased by using a longer time window, provided the measured signal is stable enough to make averaging possible without distorting the result. Further increase of precision is possible through analog or digital interpolation [40], a method used in some professional equipment.


- The *indirect* or *reciprocal method* (fig. 8.2) measures one period  $T$  as the time interval between two pulses and this is then converted to frequency as  $f = 1/T$ .

This method needs only one timer/counter. Cycles of the system clock are counted for the duration of one period on the input pin (between two rising edges). If we additionally detect the falling edge in between, the counter's value gives us the duty cycle when related to the overall period length.


The reciprocal method's resolution depends on the counter's clock speed; if driven at 48 MHz, the tick period is 20.83 ns, which defines the granularity of our time

measurement. It is common to measure several pulses and average the obtained values to further increase the precision.

We can easily achieve a sub-hertz resolution with this method, but its performance degrades at high frequencies where the time measurement precision becomes insufficient. The input frequency range can be extended using a hardware prescaler<sup>1</sup>, which is also applicable to the direct method, should the measurement of frequencies outside the counter's supported range be required. A duty cycle measurement available in this method can be used to read the output of sensors that use a pulse-width modulation.

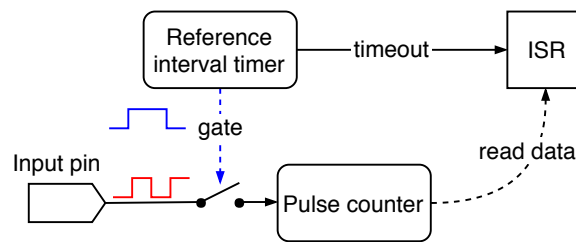

**Figure 8.1:** Direct frequency measurement method

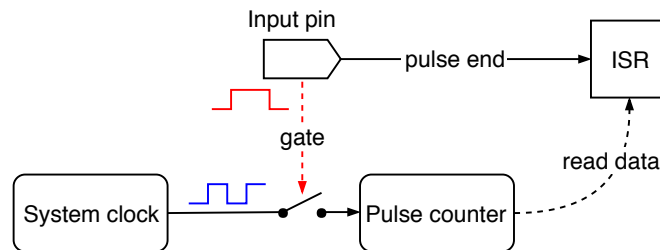


**Figure 8.2:** Reciprocal frequency measurement method

Which method to use depends on the frequency we want to measure; the worst-case measurement errors of both methods, assuming an ideal 48 MHz system clock, are plotted in figure 8.3. It can be seen that the reciprocal method leads in performance up to 7 kHz where the direct method overtakes it. If a higher error is acceptable, the reciprocal method could be used also for higher frequencies to avoid a reconfiguration and to take advantage of its higher speed.

A good approach to a universal measurement, when we don't know the expected frequency beforehand, could be to first obtain an estimate using the direct method, and if the frequency is below the worst-case error crossing point (here 7 kHz), to take a more precise measurement using the reciprocal method.

The system clock's frequency, which we use to measure pulse lengths and to gate the pulse counter, will be affected by tolerances of the used components, the layout of the PCB, temperature effects etc., causing measurement errors. A higher accuracy could be achieved using a **temperature-compensated oscillator (TCO)**, or, in the direct method, with the synchronization pulse provided by a **GPS** receiver to time the measurement interval.

<sup>1</sup>*Prescaler* is a divider implemented as part of the timer/counter peripheral block that can be optionally enabled and configured to a desired division factor.

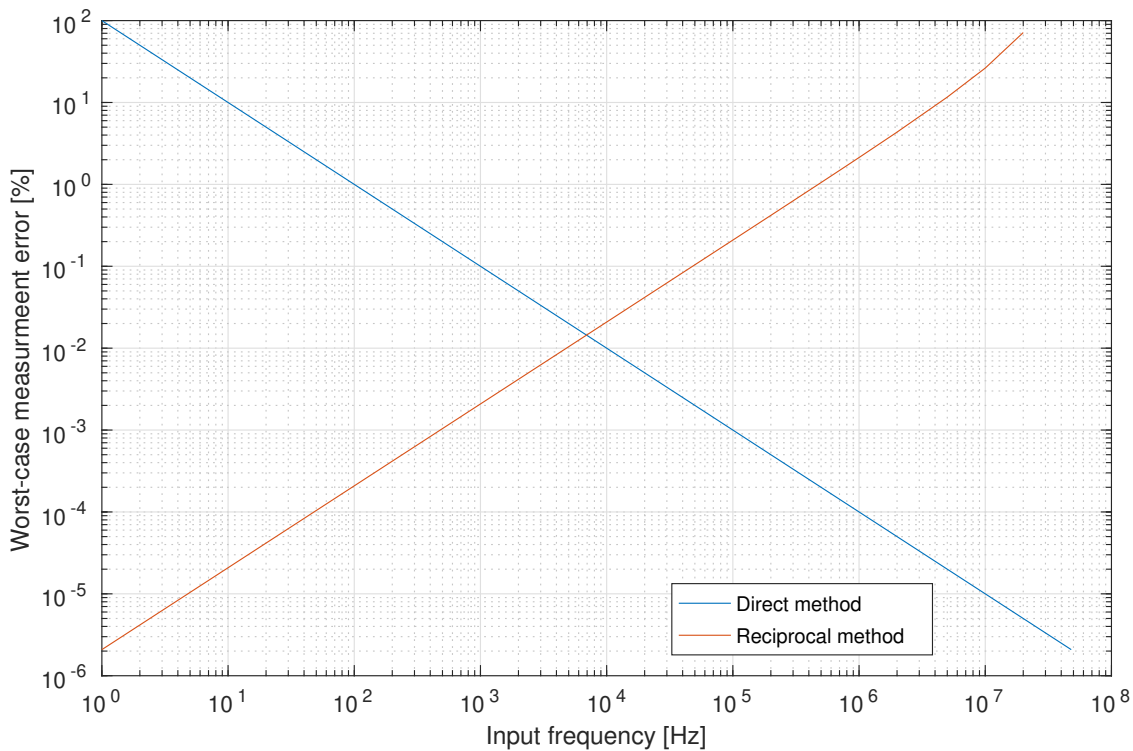

**Figure 8.3:** Worst-case error using the two frequency measurement methods with an ideal 48 MHz timer clock. The crossing lies at 7 kHz with an error of 0.015 %, or 1.05 Hz.


## 8.2 Analog Signal Acquisition

A very common need in experiments involving the measurement of physical properties is the acquisition of analog signals, respective voltages. Those can be roughly divided into **DC** and **alternating current (AC)** or time-changing signals. Analog signals are converted to digital values using **ADCs**. Several principles of analog signal measurement exist with different cost, speed, resolution, and many other factors which determine their suitability for a particular application.

**DC** signals can be measured by taking several samples and calculating their average value; in the presence of a 50 Hz or 60 Hz mains interference, its advisable to spread those samples over the 20 ms (resp. 16.7 ms) time of one period so that the interfering waveform cancels out. Time-changing signals can be captured by taking isochronous samples at a frequency conforming to the Nyquist theorem, that is, at least twice that of the measured signal. In practice, a frequency several times higher is preferred for a more accurate capture.

The **ADC** type commonly available in microcontrollers, including our STM32F072, uses a *successive approximation* method. It is called the *SAR type ADC*, after its main component, the **successive approximation register (SAR)**. A diagram of this **ADC** is shown in figure 8.4.

The **SAR** type converter uses a **DAC**, controlled by the value in the **SAR**, which approximates the input voltage, bit by bit, following the algorithm described in [41] and outlined below:

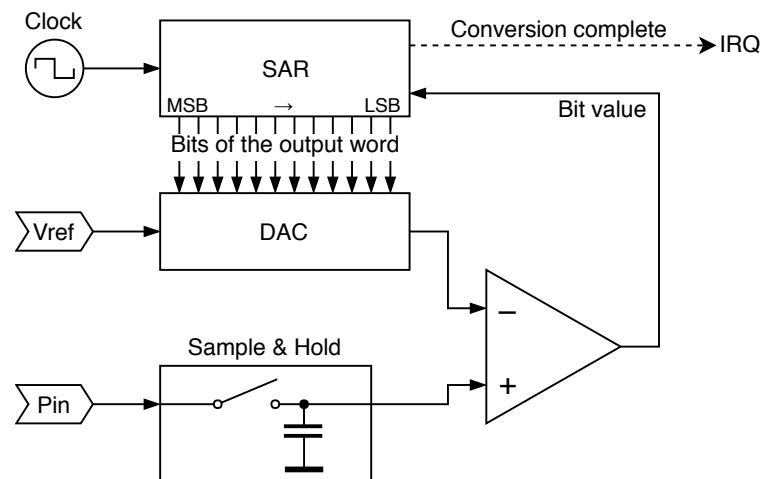

**Figure 8.4:** A diagram of the SAR type ADC

1. The **SAR** is cleared to all zeros.
2. The **DAC** generates an approximation voltage.
3. Its output is compared with the sampled input, and the comparator's output is stored as the active bit in the approximation register.
4. The approximation continues with step 2 and the following (less significant) bit.
5. When all bits of the data word were found, an interrupt request is generated and the application program can read it from the **SAR**.

A change of the input value would make this principle unreliable, which is why the input is buffered by a sample & hold circuit. The holding capacitor is charged to the input voltage and maintains this level during the conversion. The duration for which the capacitor is connected to the input is called a *sampling time*.

## 8.3 Waveform Generation

A waveform generator is a useful tool in many experiments and measurements. A sine stimulus is the basis of a lock-in amplifier; it can be used to measure impedance; with a frequency sweep, we can obtain the frequency response of an analog filter, etc. We can, of course, generate other waveforms, such as a triangle, ramp, or rectangle wave.


The **DAC** peripheral can produce a **DC** level on the output pin based on a control word. When we periodically change its digital input, it produces an analog waveform.

### 8.3.1 Waveform Generation with DMA and a Timer

A straightforward, intuitive implementation of the waveform generator is illustrated in figure 8.5. This approach has its advantages: it's simple and works autonomously, with no



interrupt handling or interventions from the program. It could be implemented without the use of **Direct Memory Access (DMA)** as well, using a loop periodically updating the **DAC** values; of course, such approach is less flexible and we would run into problems with interrupt handling affecting the timing accuracy.

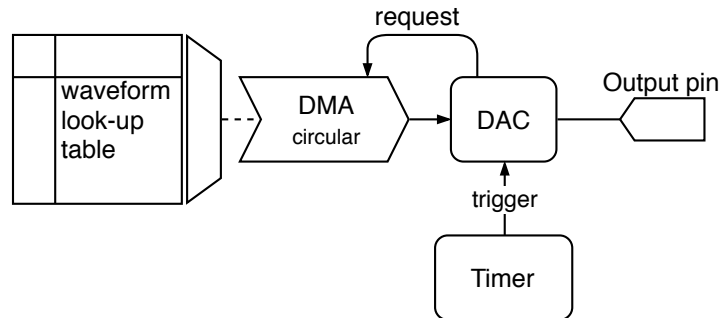

**Figure 8.5:** A simple implementation of the waveform generator, using DMA and a look-up table


The highest achievable output frequency largely depends on the size of our look-up table. For instance, assuming a timer frequency of 48 MHz and a 8192-word table, holding one period of the waveform, the maximum frequency would be short of 6 kHz, whereas if we shorten the table to just 1024 words, we can get almost 47 kHz on the analog output. The downside of a shorter table is a lower resolution, which will appear as **DC** plateaus or steps when observed with an oscilloscope, producing harmonic components similar to those of a square wave.

A major disadvantage of this simple generation method is given by the limitations of the used timer, which defines the output frequency. Its output trigger fires when the internal counter reaches a pre-defined value, after which the counting register is reset. The counting speed is derived from the system clock frequency  $f_c$  using a prescaler  $P$  and the set maximum value  $N$ . Only output frequencies that can be exactly expressed as  $f = f_c / (P \cdot N \cdot \text{TableSize})$  can be accurately produced. Still, this simple and efficient method may be used where fine tuning is not required to take advantage of its fully asynchronous operation.

### 8.3.2 Direct Digital Synthesis

There are situations where the simple waveform generation method is not sufficient, particularly when a fine tuning or on-line frequency and phase changes are required. Those are the strengths of **Direct Digital Synthesis (DDS)**, an advanced digital waveform generation method well explained in [42].

A diagram of a possible **DDS** implementation in the STM32 firmware is shown in figure 8.6. It is based on a **numerically controlled oscillator (NCO)**. The **NCO** consists of a *phase accumulator* register and a *tuning word* which is periodically added to it at a constant rate in a timer interrupt handler. The value of the tuning word determines the output waveform frequency. The look-up table must have a power-of-two length so that it can be addressed by the  $n$  most significant bits of the phase accumulator. An additional control word could

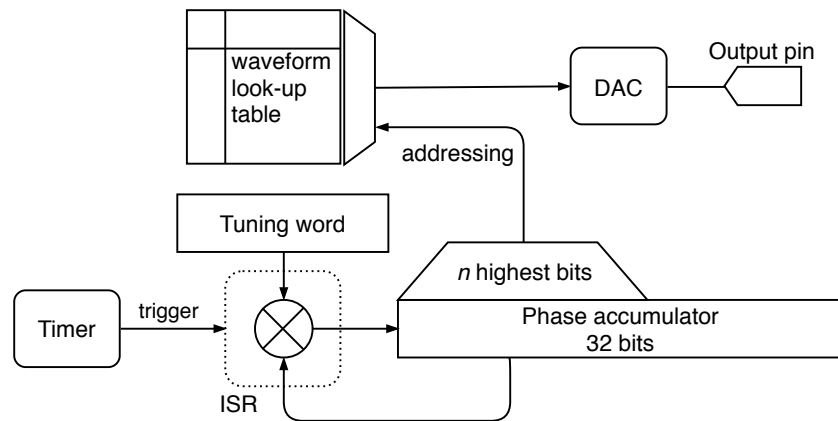

**Figure 8.6:** A block diagram of a DDS-based waveform generator

be added to this address to implement a phase offset for applications like a phase-shift modulation.

The output frequency is calculated as  $f_{\text{out}} = \frac{M \cdot f_c}{2^n}$ , where  $M$  is the tuning word,  $n$  is the bit length of the phase accumulator, and  $f_c$  is the frequency of the phase-updating interrupt. The number of bits used to address the look-up table does not affect the output frequency; the table can be as large as the storage space allows. A tuning word value exceeding the lower part of the phase accumulator (including bits which directly enter the look-up address) will cause some values from the table to be skipped. A smaller tuning word, conversely, makes some values appear on the output more than once. This can be observed as steps or flat areas on the output. When the tuning word does not evenly divide  $2^n$ , that is, the modulo is non-zero, we can also observe jitter.

## ■ DDS Implemented in Hardware


DDS may be implemented in hardware, including the look-up table, often together with the DAC itself, which is then called a *Complete DDS*. That is the case of e.g. AD9833 from Analog Devices. As the software implementation depends on a periodic interrupt, it's often advantageous to use a component like this when we need higher output frequencies where the use of an interrupt is not possible. GEX can control an external waveform generator like the AD9833 using an SPI port.

## ■ 8.4 Touch Sensing

The used microcontroller, STM32F072, includes a **Touch Sensing Controller (TSC)** peripheral block. It can be accessed from GEX as a demonstration of capacitive touch sensing, and could possibly be used for simple touch sensors as well, such as measuring the level of water in a tank.


The TSC requires a specific topology with a sampling capacitor connected close to the microcontroller pin, which may not be possible on a universal GEX module; for this reason,

the touch sensing feature is best demonstrated on the STM32F072 Discovery development kit, which includes a 4-segment touch slider shown in figure 8.7.

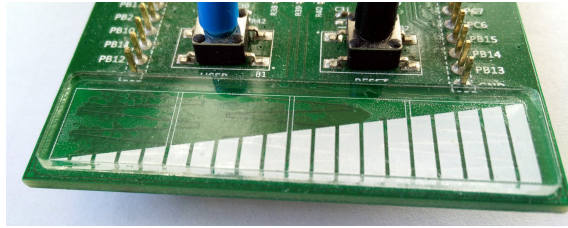

**Figure 8.7:** The touch slider on a STM32F072 Discovery board

The principle of capacitive touch sensing using the TSC is well explained in the microcontroller’s reference manual [43], the TSC product training materials [44, 45] and application notes from ST Microelectronics [46, 47, 48, 49]. A key part of the TSC is a set of analog switches which can be combined to form several different signal paths between external pins, Vdd, GND, and an analog comparator. Two input pins are needed for every touch sensing channel: the sensing pad connects to one, the other is connected through a sampling capacitor (47 nF on the Discovery board) to GND.

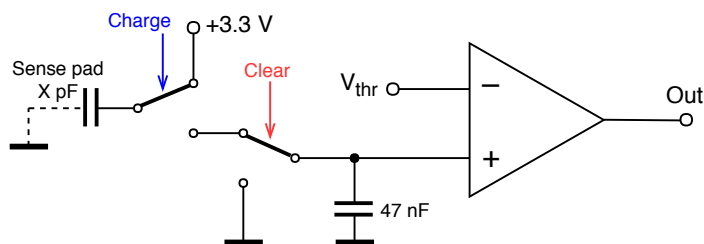


**Figure 8.8:** A simplified schematic of the touch sensing circuit

Capacitive sensing is a sequential process described in the following steps:

1. The sampling capacitor is discharged by connecting its free end to GND.
2. The sensing pad is connected to +3.3 V and, acting as a capacitor, charged to this voltage. It stores a small amount of charge, depending on its capacitance—this is the variable property we are trying to measure.
3. The free terminals of the two capacitors (the sensing pad and the sampling capacitor) are connected together and their voltages reach an equilibrium as a portion of the stored charge leaves the sensing pad and flows into the bigger capacitor.
4. The steps (2) and (3) are repeated until the sampling capacitor’s voltage exceeds a fixed threshold (set to a half of the supply voltage). The number of cycles needed to charge the sampling capacitor corresponds to the capacitance of the sensing pad.

A real voltage waveform measured on the sensing pad using an oscilloscope is shown in figure 8.9.

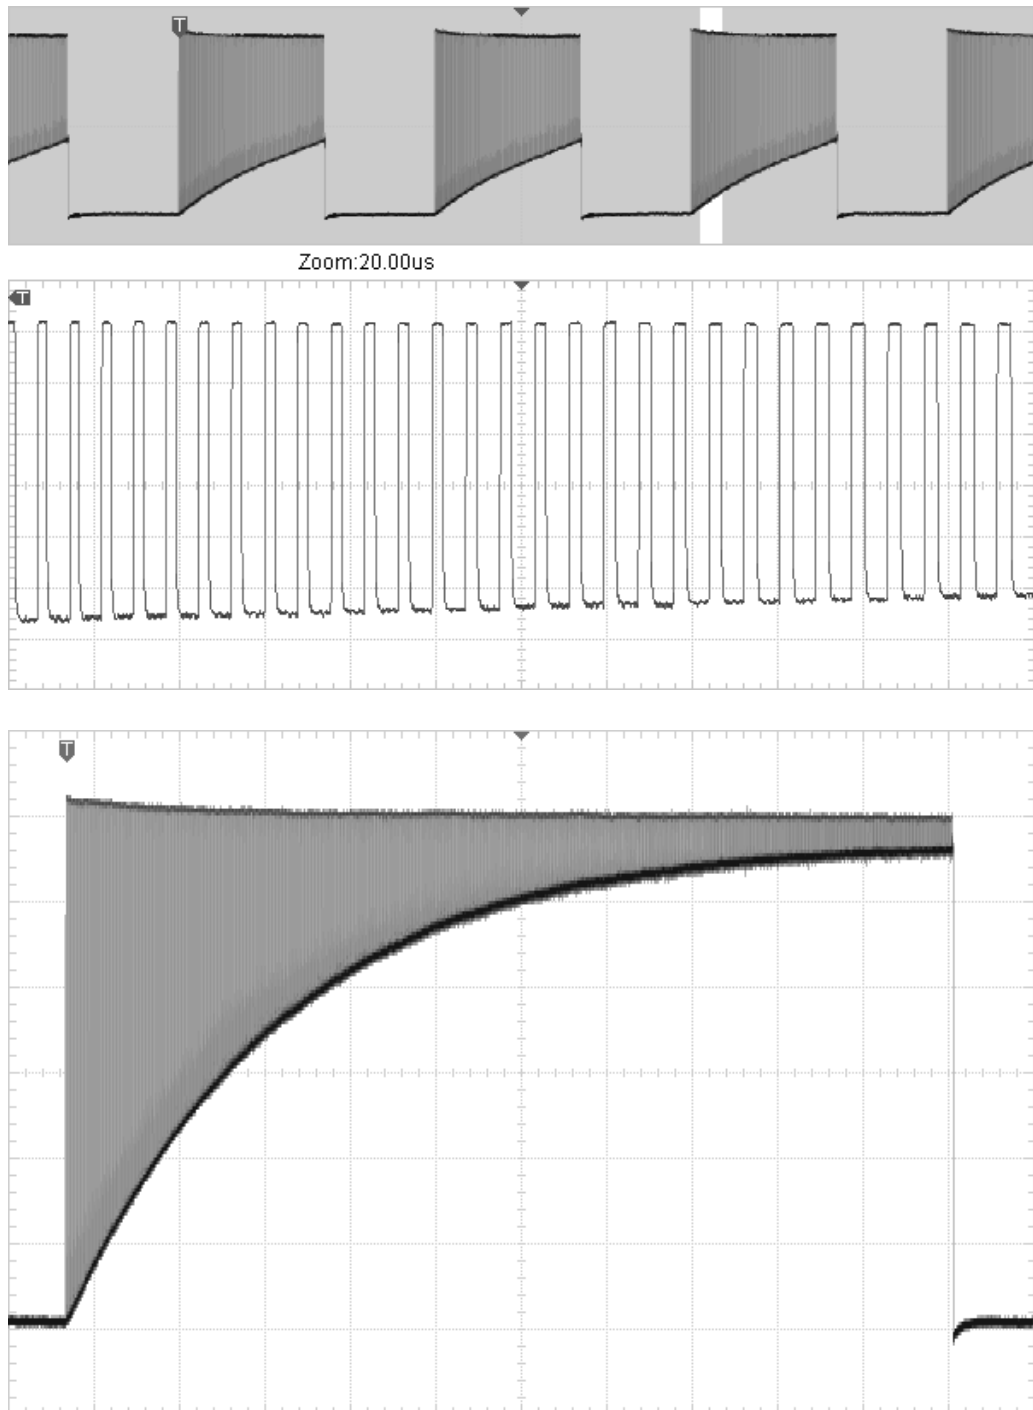

**Figure 8.9:** A voltage waveform measured on the touch sensing pad. The bottom side of the envelope equals the sampling capacitor's voltage—this is the phase where both capacitors are connected. The detailed view (middle) shows the individual charging cycles. The bottom screenshot captures the entire waveform, left to continue until a timeout, after the analog comparator was disabled.



## **Part III**

### **Implementation**



## Chapter 9

# Application Structure

GEX is designed to be modular and easy to extend. It's composed of a set of functional blocks (also called *units*), sometimes available in more than one instance, which can be configured by the user to fit their application needs. The firmware is built around a *core framework* which provides services to the functional blocks, such as a settings storage, resource allocation, message delivery and periodic updates.

In this chapter we will focus on the general function of the GEX module and will look at the services provided by the core framework. Individual functional blocks and the communication protocol will be described in chapters 10 and 13.

### 9.1 User's View of GEX

Before going into implementation details, we'll have a look at GEX from the outside, how the end user will see it. This should give the reader some context to better orient themselves in the following sections and chapters investigating the internal structure of the firmware and the communication protocol.

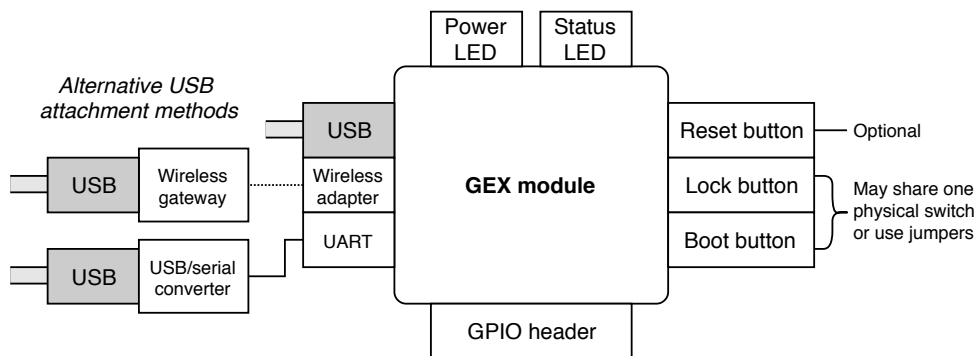


Figure 9.1: Physical user interface of a GEX module

The GEX firmware can be flashed to a STM32 Nucleo or Discovery board or a custom PCB. It's equipped with a USB connector to connect to the host PC. GEX loads its configuration from the Flash memory, configures its peripherals, sets up the function blocks and enables the selected communication interface(s).

The physical user interface of the module is shown in figure 9.1. When a USB cable connects the board to a PC, the PC OS enumerates it and either recognizes the communication










The unit driver handles commands sent from the host **PC**, initializes and de-initializes the unit based on its settings, and implements other aspects of the unit's function, such as periodic updates and interrupt handling. Unit drivers may expose public **API** functions to make it possible to control the unit from a different driver, allowing the creation of "macro units".

## 9.5 Source Code Layout

Looking at the source code repository (fig. 9.3), at the root we'll find the device specific driver libraries and support files provided by ST Microelectronics, the FreeRTOS middleware, and a folder called **User** containing the GEX application code. This division is useful when porting the firmware to a different microcontroller, as the GEX folder is mostly platform-independent and can be simply copied (of course, adjustments are needed to accompany different hardware peripheral versions etc.). The GEX core framework consists of everything in the **User** folder, excluding the **units** directory in which the individual units are implemented. Each unit driver must be registered in the file `platform.c` to be available for the user to select. The file `plat_compat.c` includes platform-specific headers and defines e.g. which pin to use for a status **LED** or the **LOCK** button.

The **USB** Device library, which had to be modified to support a composite class, is stored inside the **User** folder too, as it is compatible with all STM32 microcontrollers that support **USB**.

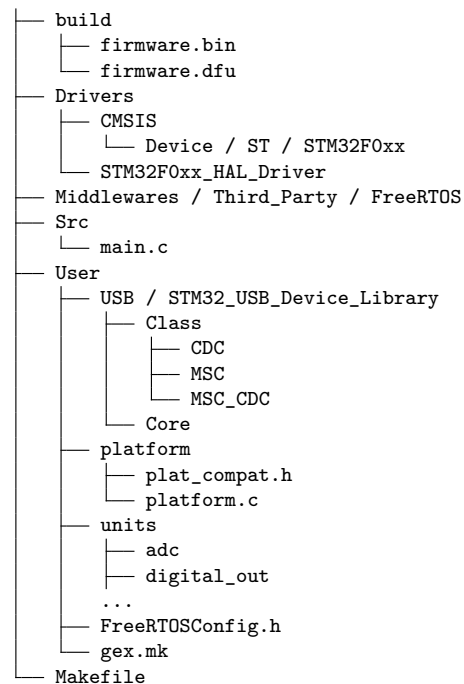

**Figure 9.3:** The general structure of the source code repository

## 9.6 Functions of the Core Framework


The core framework forms the skeleton of the firmware and usually doesn't need any changes when new user-facing features are added. It provides the following services:

- Hardware resource allocation (9.6.1)
- Settings storage and loading (9.6.2)
- Functional block (*units*) initialization (9.4)
- The communication port with different back-ends: **USB**, **UART**, wireless (9.6.3)
- Message sending and delivery (9.6.4)

- Interrupt management and routing to functional blocks (9.6.5)
- Virtual mass storage for configuration file editing

When the firmware needs to be ported to a different STM32 microcontroller, the core framework is relatively straightforward to adapt and the whole process can be accomplished in a few hours. The time consuming part is modifying the functional blocks to work correctly with the new device's hardware.

### 9.6.1 Resource Allocation

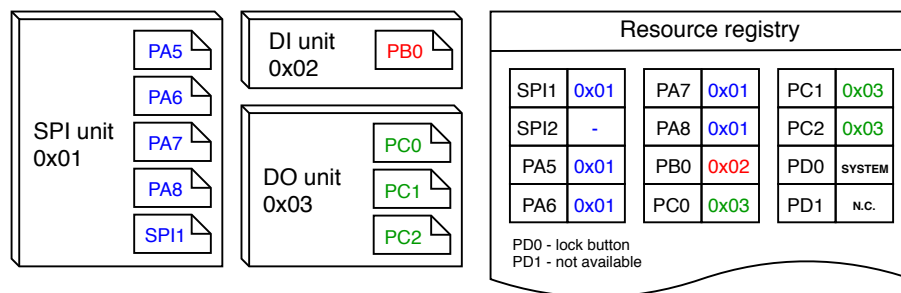

**Figure 9.4:** An example allocation in the resource registry

The microcontroller provides a number of hardware resources that require exclusive access: GPIO pins, peripheral blocks (**SPI**, **I<sup>2</sup>C**, **UART**...), **DMA** channels. If two units tried to control the same pin, the results would be unpredictable; similarly, with a multiple access to a serial port, the output would be a mix of the data streams and completely useless.


To prevent a multiple access, the firmware includes a *resource registry* (fig. 9.4). Each individual resource is represented by a field in a resource table together with its owner's callsign. Initially all resources are free, except for those not available on the particular platform (i.e. a GPIO pin PD1 may be disabled if not present on the microcontroller's package).

The resources used by the core framework are taken by a virtual unit **SYSTEM** on start-up to prevent conflicts with the user's units. This is the case of the status **LED**, the **LOCK** button, **USB** pins, the communication **UART**, the pins and an **SPI** peripheral connecting the wireless module, pins used for the crystal oscillator, and the timer/counter which provides the system timebase.

### 9.6.2 Settings Storage

The system and unit settings are written, in a binary form, into designated pages of the microcontroller's Flash memory. The unit settings serialization and parsing is implemented by the respective unit drivers.

As the settings persist after a firmware update, it's important to maintain backwards compatibility. This is achieved by prefixing the unit's settings by a version number. When

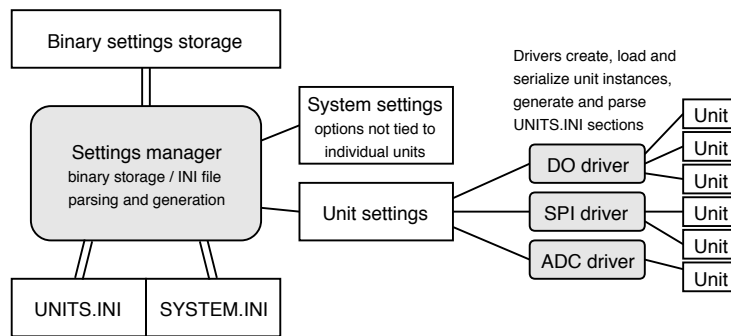

**Figure 9.5:** Structure of the settings subsystem

the settings are loaded by a new version of the firmware, it first checks the version and decides whether to use the old or new format. When the settings are next changed, the new format will be used.

The INI files, which can be edited through the communication **API** or using a text editor with the virtual mass storage, are parsed and generated on demand and are never stored in the Flash or **RAM**, other than in short temporary buffers. The INI parser processes the byte stream on-the-fly as it is received, and a similar method is used to build a INI file from the configured units and system settings.

### ■ 9.6.3 Communication Ports

The firmware supports three different communication ports: hardware **UART**, **USB** (virtual serial port), and a wireless connection. Each interface is configured and accessed in a different way, but for the rest of the firmware (and for the **PC**-side application) they all appear as a full duplex serial port. To use interfaces other than **USB**, the user must configure those in the system settings (a file **SYSTEM.INI** on the configuration disk).

At start-up, the firmware enables the **USB** peripheral, configures the device library and waits for enumeration by the host **PC**. When not enumerated, it concludes the **USB** cable is not connected, and tries some other interface. The **UART** interface can't be tested as reliably, but it's possible to measure the voltage on the Rx pin. When idle, a **UART** Rx line should be high (here 3.3 V). The wireless module, when connected using **SPI**, can be detected by reading a register with a known value and comparing those.

#### ■ USB Connection

GEX uses vid:pid 1209:4c60 and the wireless gateway 1209:4c61. The **USB** interface uses the **CDC/ACM USB** class (4.3.2) and consists of two bulk endpoints with a payload size of up to 64 bytes.

#### ■ Communication UART

The parameters of the communication **UART** (such as the baud rate) are defined in **SYSTEM.INI**. It's mapped to pins PA2 and PA3; this is useful with STM32 Nucleo boards



memory and can't be changed at run-time. This is a complication for the modular structure of GEX where different unit drivers may use the same peripheral, and we would want to dynamically assign the interrupt handlers based on the active configuration. Let's have a look at an interrupt handler, in this case handling four different **DMA** channels, as is common in STM32 microcontrollers:

```
void DMA1_Channel4_5_6_7_IRQHandler(void)
{
    if (LL_DMA_IsActiveFlag_GI4(DMA1)) { /* handle DMA1 channel 4 */ }
    if (LL_DMA_IsActiveFlag_GI5(DMA1)) { /* handle DMA1 channel 5 */ }
    if (LL_DMA_IsActiveFlag_GI6(DMA1)) { /* handle DMA1 channel 6 */ }
    if (LL_DMA_IsActiveFlag_GI7(DMA1)) { /* handle DMA1 channel 7 */ }
}
```

It is evident that multiple units might need to use the same interrupt handler, even at the same time, since each **DMA** channel is configured, and works, independently. GEX implements a redirection scheme to accomplish such interrupt sharing: All interrupt handlers are defined in one place, accompanied by a table of function pointers. When a unit driver wants to register an interrupt handler, it stores a pointer to it in this redirection table. Then, once an interrupt is invoked, the common handler checks the corresponding entry in the table and calls the referenced routine, if any. Conversely, when a unit driver deinitializes a unit, it removes all interrupt handlers it used, freeing the redirection table slots for other use.





# Chapter 10

## Communication Protocol

GEX can be controlled through a hardware **UART**, the **USB** or over a wireless link. To minimize the firmware complexity, all the three connection methods are handled by the same protocol stack and are functionally interchangeable.

The communication is organized in transactions. A transaction consists of one or more messages going in either direction. Messages can be stand-alone, or chained with a response or a follow-up message using the transaction ID. Both peers, GEX and the client application running on the host PC, are equal in the communication: either side can independently initiate a transaction at any time.

GEX uses a framing library *TinyFrame* [50], developed likewise by the author, but kept as a separate project for easier re-use in different applications. The library implements frame building and parsing, checksum calculation and a system of message listeners.

### 10.1 Frame Structure

Message frames have the following structure (all little-endian):

*“TinyFrame” frame structure, as used in GEX*

- **u8** start-of-frame marker (0x01)
- **u16** frame ID
- **u16** payload length
- **u8** frame type
- **u8** header checksum
- **u8[]** payload
- **u8** payload checksum (omitted for empty payloads)

*Frame ID*, which could be better described as *Transaction ID*, uniquely identifies each transaction. The most significant bit is set to a different value in each peer to avoid ID conflicts, and the rest of the ID field is incremented with each initiated transaction.

## 10.2 Message Listeners

After sending a message that should receive a response, the peer registers an *ID listener* with the ID of the sent message. A response reuses the original frame ID and when it is received, this listener is called to process it. ID listeners can also be used to receive multi-part messages re-using the original ID.

*Frame type* describes the payload and does not have any prescribed format; the values are defined by application (here, GEX). A *type listener* may be registered to handle all incoming messages with a given frame type. It works in a similar way to an ID listener and has a lower priority.

Each message can be handled by only one listener, unless it explicitly requests the message to be passed on to a lower priority one. Messages unhandled by any listener are given to a default listener, which can e.g. write an error to a debug log.

## 10.3 Designated Frame Types

The following table lists all frame types used by GEX. It is divided into four logical sections: General, Bulk Read/Write, Unit Access, and Settings.

Frame type	Function	Note
0x00	Success	<i>Payload depends on context</i>
0x01	Ping	<i>GEX responds with Success and its version string</i>
0x02	Error	<i>Payload contains the error message</i>
0x03	Bulk Read Offer	<i>An offer of data to read using 0x04</i>
0x04	Bulk Read Poll	<i>Requesting to read a block of data</i>
0x05	Bulk Write Offer	<i>An offer to receive a bulk write transaction</i>
0x06	Bulk Data	<i>Used for both reading and writing</i>
0x07	Bulk End	<i>Marks the last “Bulk Data” frame</i>
0x08	Bulk Abort	
0x10	Unit Request	<i>Request to a unit</i>
0x11	Unit Report	<i>Spontaneous event generated by a unit</i>
0x20	List Units	<i>Read a list of all instantiated units</i>
0x21	INI Read	<i>Request a bulk read transaction of an INI file</i>
0x22	INI Write	<i>Request a bulk write transaction of an INI file</i>
0x23	Persist Config	<i>Write updated configuration to Flash</i>

## 10.4 Bulk Read and Write Transactions

The bulk read and write transactions are generic, multi-message exchanges which are used to transfer the INI configuration files. They could additionally be used by some future unit requiring to transfer a large amount of data (e.g. to read image data from a camera).

The reason for splitting a long file into multiple messages, rather than sending it all in one, lies in the hardware limitations of the platform, specifically its small amount of **RAM** (the STM32F072 has only 16 kB). A message cannot be processed until its payload checksum is received and verified; however, the configuration file can have several kilobytes, owing to the numerous explanatory comments, which would require a prohibitively large data buffer. The chunked transaction could, additionally, be extended to support message re-transmission on timeout without sending the entire file again.

A read or write transaction can be aborted by a frame 0x08 (Bulk Abort) at any time, though aborting a write transaction may leave the configuration in a corrupted state. As hinted in the introduction of this chapter, a transaction is defined by sharing a common frame ID. Thus, all frames in a bulk transaction must have the same ID, otherwise the ID listeners won't be called for the subsequent messages, and the transaction will time out.

Figure 10.1 shows a diagram of the bulk read and write data flow.

### 10.4.1 Bulk Read

To read an INI file, we first send a frame 0x21 (INI Read), specifying the target file in the payload:


<i>INI Read frame structure</i>
<ul style="list-style-type: none"> <li>• <b>u8</b> which file to write               <ul style="list-style-type: none"> <li>– 0 ... UNITS.INI</li> <li>– 1 ... SYSTEM.INI</li> </ul> </li> </ul>

What follows is a standard bulk read transaction with the requested file. GEX offers the file for reading with a frame 0x03 (Bulk Read Offer):

<i>Bulk Read frame structure</i>
<ul style="list-style-type: none"> <li>• <b>u32</b> full size of the file in bytes</li> <li>• <b>u32</b> largest chunk that can be read at once</li> </ul>

Now we can proceed to read the file using 0x04 (Bulk Read Poll), which is always responded to with 0x06 (Bulk Data), or 0x07 (Bulk End) if this was the last frame. Data frames have only the useful data as their payload.

The 0x04 (Bulk Read Poll) payload specifies how many bytes we want to read:

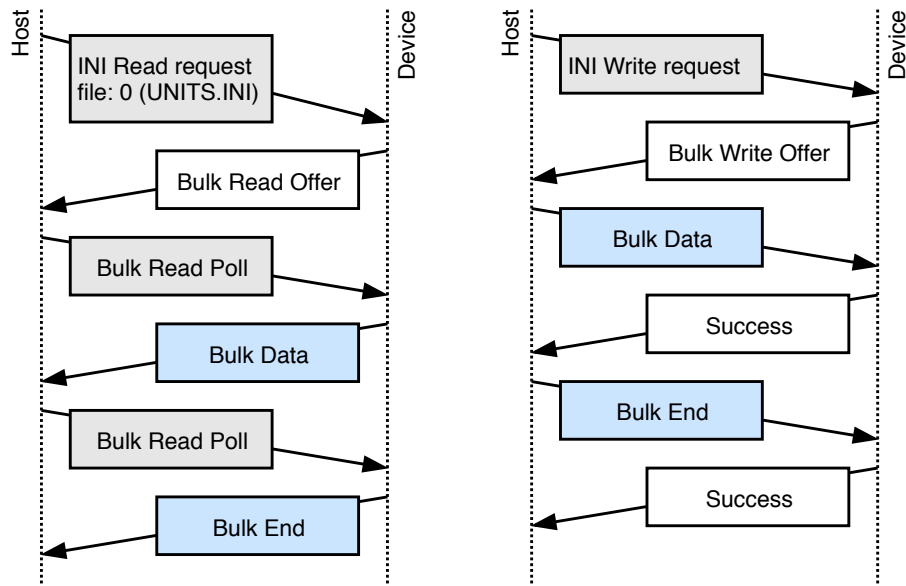

**Figure 10.1:** A diagram of the bulk read and write transaction.

<i>Bulk Read Poll frame structure</i>
<ul style="list-style-type: none"> <li>• <b>u32</b> how many bytes to read (at most)</li> </ul>

### 10.4.2 Bulk Write

To overwrite an INI file, we first send a frame 0x22 (INI Write) with the file size as its payload. The name of the file is irrelevant, as it's detected automatically by inspecting the content.

<i>INI Write frame structure</i>
<ul style="list-style-type: none"> <li>• <b>u32</b> size of the written file, in bytes</li> </ul>

The write request is confirmed by a frame 0x05 (Bulk Write Offer) sent back:

<i>Bulk Write Offer frame structure</i>
<ul style="list-style-type: none"> <li>• <b>u32</b> total bytes to write (here copied from the request frame)</li> <li>• <b>u32</b> how many bytes may be written per message</li> </ul>

We can now send the file as a series of frames 0x06 (Bulk Data), or 0x07 (Bulk End) in the last frame, with chunks of the data as their payload. Each frame is confirmed by 0x00 (Success).

*Bulk Data or Bulk End frame structure*

- `u8 []` a chunk of the written file

### 10.4.3 Persisting the Changed Configuration to Flash

The written INI file is immediately parsed and the settings are applied. However, those changes are not persistent: they exist only in RAM and will be lost when the module restarts. To save the current state to Flash, issue a frame 0x23 (Persist Config). This has the same effect as pressing the LOCK button (or replacing the LOCK jumper) when the INI files are edited using the virtual mass storage.

It should be noted that after flashing a firmware, the Flash control registers may remain in an unexpected state and the module must first be manually restarted before attempting to persist settings. Otherwise an assertion will fail and the module is restarted by a watchdog, losing the temporary changes.

## 10.5 Reading a List of Units

The frame 0x20 (List Units) requests a list of all available units in the GEX module. The list includes all units' callsigns, names and types. The response payload has the following format (in pseudocode):

*List Units response structure (frame type Success)*

- `u8` the number of available units
- For each unit:
  - `u8` unit callsign
  - `char []` unit name (zero-terminated string)
  - `char []` unit type (zero-terminated string)

## 10.6 Unit Requests and Reports

Frame types 0x10 (Unit Request) and 0x11 (Unit Report) are dedicated to messages sent to and by unit instances. Each has a fixed header (*inside the payload*) followed by unit-specific data.

### 10.6.1 Unit Requests

Unit requests deliver a message from the host to a unit instance. Unit drivers implements different commands, each with its own payload structure. The frame 0x10 (Unit Request) has the following structure:

*Unit Request frame structure*

- **u8** unit callsign
- **u8** command number, handled by the unit driver
- **u8[]** command payload, handled by the unit driver; its size and content depend on the unit driver and the particular command number

The most significant bit of the command byte (0x80) has a special meaning: when set, the message delivering routine responds with 0x00 (Success) after the command completes, unless an error occurred. That is used to get a confirmation that the message was delivered and the module operates correctly (as opposed to e.g. a lock-up resulting in a watchdog reset). Requests which normally generate a response (e.g. reading a value from the unit) should not be sent with this bit set. As a result of this special treatment of the highest bit, there can be only 127 different commands per unit.

### ■ 10.6.2 Unit Reports

Several unit types can produce asynchronous events, such as reporting a pin change or a triggering condition. The event is timestamped and sent with a frame type 0x11 (Unit Report):

*Unit Report (event) frame structure*


- **u8** unit callsign
- **u8** report type, defined by the unit driver
- **u64** event time (microseconds since power-on)
- **u8[]** report payload; its size and content depend on the unit driver and the particular report type

# Chapter 11

## Wireless Interface

Four methods of a wireless connection have been considered: Bluetooth (e.g. with CC2541), WiFi with ESP8266, a 868 MHz long range link with SX1276, and a 2.4 GHz link with nRF24L01+. Bluetooth was dismissed early for its complexity, and ESP8266 for its high consumption in continuous reception mode, although both solutions might be viable for certain applications and with more development time.

The Semtech SX1276 [51] and Nordic Semiconductor nRF24L01+ [52] transceivers have both been tested using the first GEX prototype, proving its usefulness as a hardware development tool, and it has been confirmed they could fulfill the requirements of our application.

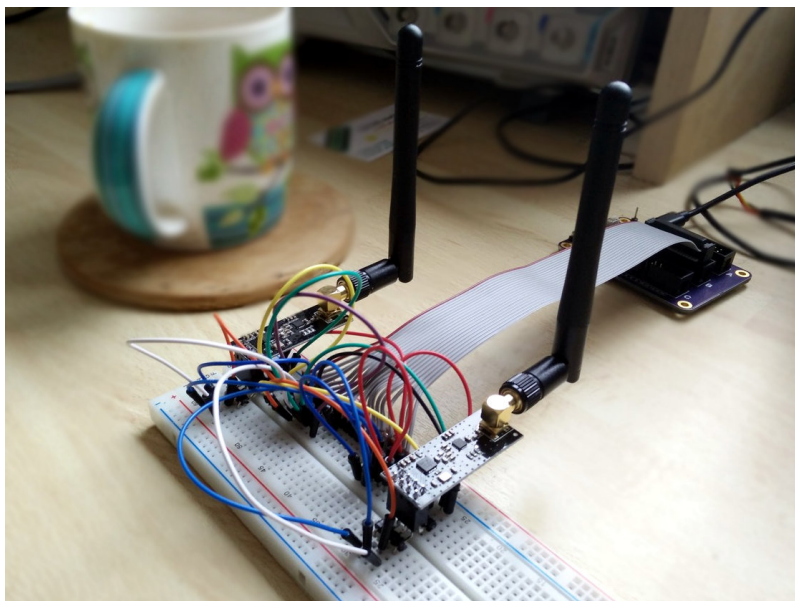

**Figure 11.1:** Test setup with a GEX prototype controlling two nRF24L01+ modules

### 11.1 Modulations Overview

A brief overview of the different signal modulation techniques is presented here to aid the reader with understanding of table 11.1 and the rest of the chapter.

### 11.1.1 On-Off Keying (OOK)

In **on-off keying (OOK)**, the carrier generator is switched on and off to transmit ones and zeros.

### 11.1.2 Frequency Shift Keying (FSK)

**Frequency-shift keying (FSK)** uses a change of the carrier frequency to transmit data. The simplest form of **FSK** is **binary frequency-shift keying (BFSK)**, which uses a pair of alternating frequencies to transmit ones and zeros.

### 11.1.3 Gaussian Frequency Shift Keying (GFSK)

**Gaussian frequency-shift keying (GFSK)** is an improvement over basic **FSK** which does not switch between the different frequencies instantaneously, but uses a Gaussian filter to make the changes less abrupt, which reduces the side-band interference otherwise generated by the sharp edges. This scheme can be imagined as sending the binary waveform through a Gaussian filter and then modulating a **VCO** with its output, rather than changing the **VCO**'s control voltage discretely. **GFSK** is used in the Bluetooth standard.

### 11.1.4 Minimum-Shift Keying (MSK)

**Minimum-shift keying (MSK)** is another **FSK**-based modulation scheme. In **MSK**, the frequencies representing different symbols are chosen such that there are no sharp changes in the phase of the output waveform, the modulation is *phase-coherent*. This is another way to reduce side-band interference.

### 11.1.5 Gaussian Minimum-Shift Keying (GMSK)

**Gaussian minimum-shift keying (GMSK)** is a variant of **MSK** which uses a Gaussian filter to shape the digital signal before sending it to the oscillator. The principle is similar to **GFSK**, and it is a yet another way to reduce side-band interference and increase spectral efficiency. **GMSK** is used in the **Global System for Mobile communications (GSM)**.

### 11.1.6 LoRa Modulation

LoRa is a patented proprietary modulation developed by Semtech. It uses a direct sequence frequency hopping spread spectrum modulation and can achieve very long range transmission (over 10 km is not uncommon). LoRa is available only with transceiver **ICs** produced by Semtech and for this reason it is rather expensive.

## 11.2 Comparing SX1276 and nRF24L01+

The two transceivers are compared in table 11.1. It's apparent that each has its strengths and weaknesses, discussed below.



Parameter	SX1276	nRF24L01+
<b>Connection</b>	SPI (4 pins) + up to 6 IRQ	SPI (4 pins), CE, IRQ
<b>Frequency band</b>	868 MHz or 433 MHz	2.4 GHz
<b>Data rate</b>	up to 300 kbps	250–2000 kbps
<b>Modulation</b>	(G)FSK, (G)MSK, OOK, LoRa	GFSK
<b>Range (est.)</b>	over 10 km	up to 1 km
<b>Consumption Rx</b>	10.8–12 mA	12.6–13.5 mA
<b>Consumption Tx</b>	20–120 mA	7–11.3 mA
<b>Idle power (max)</b>	1 $\mu$ A sleep, 2 mA stand-by	0.9 $\mu$ A sleep, 320 $\mu$ A stand-by
<b>Max packet size</b>	300 bytes	32 bytes
<b>Reset</b>	NRESET pin	Vdd disconnect
<b>Extra</b>	LoRa FHSS, packet engine	ShockBurst protocol engine
<b>Price</b>	\$7.3	\$1.6

**Table 11.1:** Comparison of the SX1276 and nRF24L01+ wireless transceivers, using data from their datasheets (price in USD from DigiKey in a 10 pcs. quantity, recorded on May 6th 2018)

SX1276 supports additional modulation modes, including a proprietary LoRa scheme with a frequency-hopping spread spectrum modulation that can be received at a distance up to 20 km in ideal conditions. The long-range capability is reflected in a higher consumption during transmission. However, its consumption in receiver mode is slightly lower than that of the nRF24L01+.

nRF24L01+ provides higher data rates at short distances. Its power consumption is comparable or lower than that of the SX1276. It lacks a dedicated reset pin, but that can be easily worked around using an external transistor to momentarily disconnect its Vdd pin.

Both devices implement some form of a packet engine with error checking; that of the nRF24L01+, called ShockBurst, is more advanced as it implements acknowledgment responses and automatic re-transmission, leading to a potentially more robust communication without an additional overhead on the side of the microcontroller.

## 11.3 Integration of the nRF24L01+ into GEX

The nRF24L01+ was selected to be integrated into GEX thanks to its inclusion of the ShockBurst engine, higher possible data rates and significantly lower price. The SX1276, nonetheless, remains an interesting option that could be used as an alternative in the future, should the need for a long range communication arise.

A separate device, the *GEX wireless gateway*, was developed to provide the PC connection to a nRF24L01+ module. It is based on the STM32F103 microcontroller in its smallest package (LQFP48), selected for its low cost and good availability.


[more about the hardware](#)

### 11.3.1 The Wireless Gateway Protocol

The gateway presents itself to the host as a **CDC/ACM** device, much like the GEX modules themselves (here called *nodes*) when connected over **USB**. It implements a simple protocol which encapsulates the binary data sent to or from a connected node. The wrapped GEX protocol, which is described in chapter 10, remains unchanged.

The gateway has a 4-byte network ID, a number derived from the **MCU**'s unique ID by calculating its 32-bit **cyclic redundancy check (CRC)**. The network ID must be entered into all nodes that wish to communicate with the gateway. Additionally, each module is assigned a 1-byte number which serves as its address in the network. The gateway can receive messages from up to 6 nodes.

All messages sent to or from the gateway are a multiple of 64 bytes long, padded with zeros if shorter. The message starts with a control byte determining its type, as summarized in the following table:

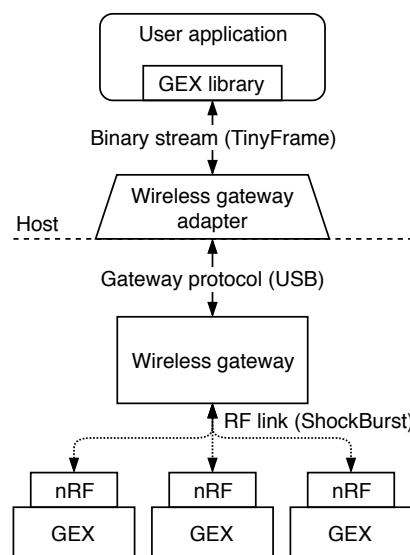

**Figure 11.2:** A block diagram of the wireless connection

First byte	Function	Structure
'r' (114)	<b>RESTART</b> Restart the gateway, disconnecting all nodes. This is functionally equivalent to re-plugging it to the USB port.	
'i' (105)	<b>GET_NET_ID</b> Read the unique 4-byte network ID. This command has no side effects and may be used as “ping” to verify the USB connection.	<i>Response:</i> <ul style="list-style-type: none"> <li>• <b>0x01</b></li> <li>• <b>u8[4]</b> network ID</li> </ul>
'n' (110)	<b>ADD_NODES</b> Configure the gateway to listen for messages from the given nodes. Nodes may be removed using the RESTART command.	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u8</b> count</li> <li>• <b>u8[]</b> node addresses</li> </ul>

First byte	Function	Structure
'm' (109)	<b>SEND_MSG</b> Send a binary message to one of the connected nodes. The message may span multiple 64-byte frames; the subsequent frames will contain only the payload bytes, or zero padding at the end of the last one.	<i>Request:</i> <ul style="list-style-type: none"> <li>• u8 node address</li> <li>• u16 length</li> <li>• u8 checksum (inverted XOR of all payload bytes)</li> <li>• u8[] payload</li> </ul>
0x02	<b>INCOMING_MSG</b> A message was received from one of the configured nodes. This is an event frame sent by the gateway to the host.	<i>Payload:</i> <ul style="list-style-type: none"> <li>• u8 node address</li> <li>• u8 message length</li> <li>• u8[] payload</li> </ul>

### 11.3.2 Gateway Initialization Procedure

A host program connecting to a node or nodes through the gateway should follow the following procedure to initialize and configure the gateway:

1. Send the 'GET\_NET\_ID' command to test if the gateway is connected (and obtain its network ID as a side effect)
2. Restart the gateway using the 'RESTART' command to clean any possible previous configuration.
3. Add the node address(es) using 'ADD\_NODES'
4. Ping the connected node(s) via TinyFrame (passed through 'SEND\_MSG' and 'INCOMING\_MSG') to test if the connection works.



# Chapter 12

## Hardware Realization

TODO  
schematics  
(maybe  
in appendix).  
photos  
of the  
PCBs.  
Links  
to this  
chapter  
from  
else-  
where



# Chapter 13

## Units Overview, Commands and Events Description

This chapter describes all functional blocks (units) implemented in GEX, version 1.0. The term “unit” will be used here to refer to both unit types (drivers) or their instances where the distinction is not important.

Each unit’s description will be accompanied by a corresponding snippet from the configuration file, and a list of supported commands and events. The commands and events described here form the payload of TinyFrame messages 0x10 (Unit Request) and 0x11 (Unit Report), as described in section 10.6. The number in the first column of the command (or event) tables, marked as “Code”, is the command number (or report type) used in the payload to identify how the message data should be treated.

When the request or response payload is empty, it’s omitted from the table. The same applies to commands with no response, in which case adding 0x80 to the command number triggers a SUCCESS response after the command is finished.

### 13.1 Naming Conventions and Common Principles

#### 13.1.1 Unit Naming

Unit types are named in uppercase (e.g. SPI, 1WIRE, NPX) in the INI file and in the list of units. Unit instances can be named in any way the user desires; using lowercase makes it easier to distinguish them from unit types. It is advisable to use descriptive names, e.g. not “pin1” but rather “button”.

#### 13.1.2 Packed Pin Access

Several units facilitate an access to a group of GPIO pins, such as the digital input and output units, or the SPI unit’s slave select pins. The STM32 microcontroller’s ports have 16 pins each, most of which can be configured to one of several alternate functions (e.g. SPI, PWM outputs, ADC input). As a consequence, it’s common to be left with a discontinuous group of pins after assigning all the alternate functions needed by an application.

For instance, we could only have the pins 0, 1, 12–15 available on a GPIO port. GEX provides a helpful abstraction to bridge the gaps in the port: The selected pins are packed together and represented, in commands and events, as a block of six pins (0x3F) instead of their original positions in the register (0xF003). This scheme is shown in figure 13.1. The

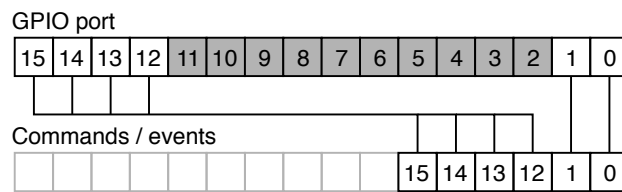


Figure 13.1: Pin packing

translation is done in the unit driver and works transparently, as if the block of pins had no gaps—all the referenced pins are updated simultaneously without glitches. Where pin numbers are used, the order in the packed word should be provided—in our example, that would be 0–5, counting from the least significant bit.

Expand unit descriptions, add diagrams... (text was written before the tables and ini snippets were added)

## 13.2 Digital Output

The digital output unit provides a write access to one or more pins of a GPIO port. This unit additionally supports pulse generation on any of its pins. This is implemented in software with the timing derived from the system timebase, as the hardware timer outputs, otherwise used for **PWM** or pulse generation, are available only on several dedicated pins. The timing code is optimized to reduce jitter.

Measure jitter and add it here

### 13.2.1 Digital Output Configuration

```
[D0:out@1]
# Port name
port=A
# Pins (comma separated, supports ranges)
pins=0
# Initially high pins
initial=
# Open-drain pins
open-drain=
```

### 13.2.2 Digital Output Commands

Code	Function	Structure
0	<b>WRITE</b> Write to all pins	<i>Request:</i> <ul style="list-style-type: none"> <li><b>u16</b> new value</li> </ul>



Code	Function	Structure
1	<b>SET</b> Set selected pins to 1	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u16</b> pins to set</li> </ul>
2	<b>CLEAR</b> Set selected pins to 0	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u16</b> pins to clear</li> </ul>
3	<b>TOGGLE</b> Toggle selected pins	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u16</b> pins to toggle</li> </ul>
4	<b>PULSE</b> Generate a pulse on the selected pins. The $\mu\text{s}$ scale may be used only for 0–999 $\mu\text{s}$ .	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u16</b> pins to pulse</li> <li>• <b>u8</b> active level (0, 1)</li> <li>• <b>u8</b> scale: 0-ms, 1-<math>\mu\text{s}</math></li> <li>• <b>u16</b> duration</li> </ul>

## 13.3 Digital Input

The digital input unit is the input counterpart of the digital output unit.

In addition to reading the immediate digital levels of the selected pins, this unit can generate asynchronous events on a pin change. The state of the entire input port, together with a microsecond timestamp (as is the case for all asynchronous events), is reported to the host either on a rising, falling, or any pin change.

The pin change event can be configured independently for each pin. In order to receive a pin change event, we must arm the pin first; it can be armed for a single event, or it may be re-armed automatically with a hold-off time. It's further possible to automatically arm selected pin triggers on start-up.

### 13.3.1 Digital Input Configuration

```
[DI:in@2]
# Port name
port=A
# Pins (comma separated, supports ranges)
pins=0
# Pins with pull-up
pull-up=
# Pins with pull-down
pull-down=

# Trigger pins activated by rising/falling edge
trig-rise=
trig-fall=
```

```
# Trigger pins auto-armed by default
auto-trigger=
# Triggers hold-off time (ms)
hold-off=100
```

### 13.3.2 Digital Input Events

Code	Function	Structure
0	<b>PIN_CHANGE</b> A pin change event. The payload includes a snapshot of all configured pins captured immediately after the change was registered.	<i>Payload:</i> <ul style="list-style-type: none"> <li>• <b>u16</b> changed pins</li> <li>• <b>u16</b> port snapshot</li> </ul>

### 13.3.3 Digital Input Commands

Code	Function	Structure
0	<b>READ</b> Read the pins	<i>Response:</i> <ul style="list-style-type: none"> <li>• <b>u16</b> pin states</li> </ul>
1	<b>ARM_SINGLE</b> Arm for a single event	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u16</b> pins to arm</li> </ul>
2	<b>ARM_AUTO</b> Arm with automatic re-arming after each event	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u16</b> pins to arm</li> </ul>
3	<b>DISARM</b> Dis-arm selected pins	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u16</b> pins to dis-arm</li> </ul>

## 13.4 SIPO (Shift Register) Unit

The shift registers driver unit is designed for the loading of data into *serial-in, parallel-out* (SIPO) shift registers, such as 74HC4094 or 74HC595. Those are commonly used to control segmented LED displays, LED matrices etc.

This unit handles both the *Shift* and *Store* signals and is capable of loading multiple shift registers simultaneously, reducing visible glitches in the display. It's also possible to set the data lines to arbitrary level(s) before sending the Store pulse, which can be latched and used for some additional feature of the LED display, such as brightness control.

### 13.4.1 SIPO Configuration

```
[SIPO:display@9]
# Shift pin & its active edge (1-rising,0-falling)
shift-pin=A1
shift-pol=1
# Store pin & its active edge
store-pin=A0
store-pol=1
# Clear pin & its active level
clear-pin=A2
clear-pol=0
# Data port and pins
data-port=A
data-pins=3
```

### 13.4.2 SIPO Commands

Code	Function	Structure
0	<b>WRITE</b> Load the shift registers and leave the data outputs in the “trailing data” state before sending the Store pulse.	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u16</b> trailing data</li> <li>• For each output (same size) <ul style="list-style-type: none"> <li>– <b>u8[]</b> data to load</li> </ul> </li> </ul>
1	<b>DIRECT_DATA</b> Directly write to the data pins (same like the DO unit’s WRITE command)	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u16</b> values to write</li> </ul>
2	<b>DIRECT_CLEAR</b> Pulse the Clear pin, erasing the registers’ data	
3	<b>DIRECT_SHIFT</b> Pulse the Shift pin	
4	<b>DIRECT_STORE</b> Pulse the Store pin	

## 13.5 NeoPixel Unit

The NeoPixel unit implements the protocol needed to control a digital **LED** strip with WS2812, WS2811, or compatible **LED** driver chips. The protocol timing is implemented in software, therefore it is available on any GPIO pin of the module.

The color data can be loaded in five different format: as packed bytes, or as the little-endian or big-endian encoding of colors in the 32-bit format 0x00RRGGBB or 0x00BBGGRR.

This data format is convenient when the colors are already represented by an array of 32-bit integers.

### 13.5.1 NeoPixel Configuration

```
[NPX:neo@3]
# Data pin
pin=A0
# Number of pixels
pixels=32
```

### 13.5.2 NeoPixel Commands

Code	Function	Structure
0	<b>CLEAR</b> Switch all <b>LEDs</b> off (sets them to black)	
1	<b>LOAD</b> Load a sequence of R,G,B bytes	<i>Request:</i> <ul style="list-style-type: none"> <li>• For each LED: <ul style="list-style-type: none"> <li>– <b>u8</b> red</li> <li>– <b>u8</b> green</li> <li>– <b>u8</b> blue</li> </ul> </li> </ul>
4	<b>LOAD_U32_ZRGB</b> Load 32-bit big-endian 0xRRGGBB (0,R,G,B)	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u32 []</b> color data BE</li> </ul>
5	<b>LOAD_U32_ZBGR</b> Load 32-bit big-endian 0xBBGRRR (0,B,G,R)	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u32 []</b> color data BE</li> </ul>
6	<b>LOAD_U32_RGBZ</b> Load 32-bit little-endian 0xBBGRRR (R,G,B,0)	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u32 []</b> color data LE</li> </ul>
7	<b>LOAD_U32_BGRZ</b> Load 32-bit little-endian 0xRRGGBB (B,G,R,0)	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u32 []</b> color data LE</li> </ul>
10	<b>GET_LEN</b> Get number of <b>LEDs</b> in the strip	<i>Response:</i> <ul style="list-style-type: none"> <li>• <b>u16</b> number of <b>LEDs</b></li> </ul>

## 13.6 SPI Unit

The **SPI** unit provides access to one of the microcontroller's **SPI** peripherals. It can be configured to use any of the different speeds, clock polarity and phase settings available in its control registers.

The unit handles up to 16 slave select (**NSS**) signals and supports message multi-cast (addressing more than one slaves at once). Protection resistors should be used if a multi-cast transaction is issued with **MISO** connected.

The **QUERY** command of this unit, illustrated by figure 13.2, is flexible enough to support all types of **SPI** transactions: read-only, write-only, and read-write with different request and response lengths. The slave select pin is held low during the entire transaction.

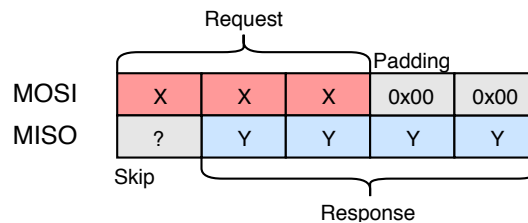


Figure 13.2: SPI transaction using the **QUERY** command

### 13.6.1 SPI Configuration

```
[SPI:spi05]
# Peripheral number (SPIx)
device=1
# Pin mappings (SCK,MISO,MOSI)
# SPI1: (0) A5,A6,A7      (1) B3,B4,B5
# SPI2: (0) B13,B14,B15
remap=0
# Prescaler: 2,4,8,...,256
prescaler=64
# Clock polarity: 0,1 (clock idle level)
cpol=0
# Clock phase: 0,1 (active edge, 0-first, 1-second)
cpha=0
# Transmit only, disable MISO
tx-only=N
# Bit order (LSB or MSB first)
first-bit=MSB
# SS port name
port=A
# SS pins (comma separated, supports ranges)
pins=0
```

## 13.6.2 SPI Commands

Code	Function	Structure
0	<b>QUERY</b> Exchange bytes with a slave device	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u8</b> slave number 0–16</li> <li>• <b>u16</b> response padding</li> <li>• <b>u16</b> response length</li> <li>• <b>u8[]</b> bytes to write</li> </ul> <i>Response:</i> <ul style="list-style-type: none"> <li>• <b>u8[]</b> received bytes</li> </ul>
1	<b>MULTICAST</b> Send a message to multiple slaves at once. The address is a bit map (e.g. 0x8002 = slaves 1 and 15).	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u16</b> addressed slaves</li> <li>• <b>u8[]</b> bytes to write</li> </ul>

## 13.7 I<sup>2</sup>C Unit

The I<sup>2</sup>C unit provides access to one of the microcontroller's I<sup>2</sup>C peripherals. It can be configured to use either of the three speeds (Standard, Fast and Fast+) and supports both 10-bit and 7-bit addressing. 10-bit addresses can be used in commands by setting their highest bit (0x8000), as a flag to the unit.

### 13.7.1 I<sup>2</sup>C Configuration

```
[I2C:d@4]
# Peripheral number (I2Cx)
device=1
# Pin mappings (SCL,SDA)
# I2C1: (0) B6,B7 (1) B8,B9
# I2C2: (0) B10,B11 (1) B13,B14
remap=0

# Speed: 1-Standard, 2-Fast, 3-Fast+
speed=1
# Analog noise filter enable (Y,N)
analog-filter=Y
# Digital noise filter bandwidth (0-15)
digital-filter=0
```

### 13.7.2 I<sup>2</sup>C Commands

Code	Function	Structure
0	<b>WRITE</b> Raw write transaction	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u16</b> slave address</li> <li>• <b>u8[]</b> bytes to write</li> </ul>
1	<b>READ</b> Raw read transaction	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u16</b> slave address</li> <li>• <b>u16</b> number of read bytes</li> </ul> <i>Response:</i> <ul style="list-style-type: none"> <li>• <b>u8[]</b> received bytes</li> </ul>
2	<b>WRITE_REG</b> Write to a slave register. Sends the register number and the data in the same <b>I<sup>2</sup>C</b> transaction. Multiple registers can be written to slaves supporting auto-increment.	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u16</b> slave address</li> <li>• <b>u8</b> register number</li> <li>• <b>u8[]</b> bytes to write</li> </ul>
3	<b>READ_REG</b> Read from a slave register. Writes the register number and issues a read transaction of the given length. Multiple registers can be read from slaves supporting auto-increment.	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u16</b> slave address</li> <li>• <b>u8</b> register number</li> <li>• <b>u16</b> number of read bytes</li> </ul> <i>Response:</i> <ul style="list-style-type: none"> <li>• <b>u8[]</b> received bytes</li> </ul>

## 13.8 USART Unit

The **USART** unit provides access to one of the microcontroller's **USART** peripherals. All **USART** parameters can be configured to match the application's needs. The peripheral is capable of driving RS485 transceivers with the **Driver Enable (DE)** output for switching between reception and transmission.

The unit implements asynchronous reception and transmission using DMA and a circular buffer. Received data is sent to the host in asynchronous events when either half of the buffer is filled, or after a fixed timeout from the last received byte.

### 13.8.1 USART Configuration

```
[USART:ser@6]
# Peripheral number (UARTx 1-4)
device=1
# Pin mappings (TX,RX,CK,CTS,RTS/DE)
# USART1: (0) A9,A10,A8,A11,A12 (1) B6,B7,A8,A11,A12
# USART2: (0) A2,A3,A4,A0,A1 (1) A14,A15,A4,A0,A1
# USART3: (0) B10,B11,B12,B13,B14
```

```

# USART4: (0) A0,A1,C12,B7,A15    (1) C10,C11,C12,B7,A15
remap=0

# Baud rate in bps (eg. 9600)
baud-rate=115200
# Parity type (NONE, ODD, EVEN)
parity=NONE
# Number of stop bits (0.5, 1, 1.5, 2)
stop-bits=1
# Bit order (LSB or MSB first)
first-bit=LSB
# Word width (7,8,9) - including parity bit if used
word-width=8
# Enabled lines (RX,TX,RXTX)
direction=RXTX
# Hardware flow control (NONE, RTS, CTS, FULL)
hw-flow-control=NONE

# Generate serial clock (Y,N)
clock-output=N
# Clock polarity: 0,1
cpol=0
# Clock phase: 0,1
cpha=0

# Generate RS485 Driver Enable signal (Y,N) - uses RTS pin
de-output=N
# DE active level: 0,1
de-polarity=1
# DE assert time (0-31)
de-assert-time=8
# DE clear time (0-31)
de-clear-time=8

```

### 13.8.2 USART Events

Code	Function	Structure
0	<b>DATA_RECEIVED</b> Data was received on the serial port.	<i>Payload:</i> <ul style="list-style-type: none"> <li>• <code>u8[]</code> received bytes</li> </ul>

### 13.8.3 USART Commands



Code	Function	Structure
0	<b>WRITE</b> Add data to the transmit buffer. Sending is asynchronous, but the command may wait for free space in the DMA buffer.	<i>Request:</i> <ul style="list-style-type: none"> <li>• <code>u8[]</code> bytes to write</li> </ul>
1	<b>WRITE_SYNC</b> Add data to the transmit buffer and wait for the transmission to complete.	<i>Request:</i> <ul style="list-style-type: none"> <li>• <code>u8[]</code> bytes to write</li> </ul>

## 13.9 1-Wire Unit

The 1-Wire unit implements the Dallas Semiconductor's 1-Wire protocol, most commonly used to interface smart thermometers (DS18x20). The protocol is explained in section 7.4.

This unit implements the ROM Search algorithm that is used to find the ROM codes of all 1-Wire devices connected to the bus. The algorithm can find up to 32 devices in one run; more devices can be found by issuing the `SEARCH_CONTINUE` command.

Devices are addressed using their ROM codes, unique 64-bit (8-byte) identifiers that work as addresses. When only one device is connected, the value 0 may be used instead and the addressing will be skipped. Its ROM code may be recovered using the `READ_ADDR` command or by the search algorithm.

### 13.9.1 1-Wire Configuration

```
[1WIRE:ow@7]
# Data pin
pin=A0
# Parasitic (bus-powered) mode
parasitic=N
```

### 13.9.2 1-Wire Commands

Code	Function	Structure
0	<b>CHECK_PRESENCE</b> Test if there are any devices attached to the bus.	<i>Response:</i> <ul style="list-style-type: none"> <li>• <code>u8</code> presence detected (0, 1)</li> </ul>
1	<b>SEARCH_ADDR</b> Start the search algorithm.	<i>Response:</i> <ul style="list-style-type: none"> <li>• <code>u8</code> should continue (0, 1)</li> <li>• <code>u64[]</code> ROM codes</li> </ul>

Code	Function	Structure
2	<b>SEARCH_ALARM</b> Start the search algorithm, finding only devices in an alarm state.	<i>Response:</i> <ul style="list-style-type: none"> <li>• <b>u8</b> should continue (0, 1)</li> <li>• <b>u64</b> [] ROM codes</li> </ul>
3	<b>SEARCH_CONTINUE</b> Continue a previously started search	<i>Response:</i> <ul style="list-style-type: none"> <li>• <b>u8</b> should continue (0, 1)</li> <li>• <b>u64</b> [] ROM codes</li> </ul>
4	<b>READ_ADDR</b> Read a device address (single device only)	<i>Response:</i> <ul style="list-style-type: none"> <li>• <b>u64</b> ROM code</li> </ul>
10	<b>WRITE</b> Write bytes to a device.	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u64</b> ROM code</li> <li>• <b>u8</b> [] bytes to write</li> </ul>
11	<b>READ</b> Write a request and read response.	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u64</b> ROM code</li> <li>• <b>u16</b> read length</li> <li>• <b>u8</b> verify checksum (0, 1)</li> <li>• <b>u8</b> [] request bytes</li> </ul> <i>Response:</i> <ul style="list-style-type: none"> <li>• <b>u8</b> [] read bytes</li> </ul>
20	<b>POLL_FOR_1</b> Wait for a READY status, used by DS18x20. Not available in parasitic mode. Responds with SUCCESS after all devices are ready.	

## 13.10 Frequency Capture Unit

The frequency capture unit implements both the frequency measurement methods explained in section 8.1: direct and reciprocal.

The unit has several operational modes: idle, reciprocal continuous, reciprocal burst, direct continuous, direct burst, free counting, and single pulse. Burst mode is an on-demand measurement with possible averaging. Continuous mode doesn't support averaging, but the latest measurement can be read at any time without a delay.

### 13.10.1 Value Conversion Formulas

Several of the features implemented in this unit would require floating point arithmetic to provide the measured value in the desired units (Hz, seconds). That is not available in Cortex-M0, only as a software implementation. The calculation is left to the client in order

to save Flash space that would be otherwise used by the the arithmetic functions. This arrangement also avoids rounding errors and a possible loss of precision.

### ■ Reciprocal (Indirect) Measurement

Period (in seconds) is computed as:

$$T = \frac{\text{period\_sum}}{f_{\text{core,MHz}} \cdot 10^6 \cdot \text{n\_periods}}$$

The frequency is obtained by simply inverting it:

$$f = T^{-1}$$

The average duty cycle is computed as the ratio of the sum of active-level pulses and the sum of all periods:

$$\text{average\_duty} = \frac{\text{ontime\_sum}}{\text{period\_sum}}$$

### ■ Direct Measurement

The frequency can be derived from the pulse count and measurement time using its definition ( $t_{\text{ms}}$  is measurement time in milliseconds):

$$f = \frac{1000 \cdot \text{count} \cdot \text{prescaller}}{t_{\text{ms}}}$$

## ■ 13.10.2 Frequency Capture Configuration

```
[FCAP:j@10]
# Signal input pin - one of:
# Full support: A0, A5, A15
# Indirect only: A1, B3
pin=A0

# Active level or edge (0-low,falling; 1-high,rising)
active-level=1
# Input filtering (0-15)
input-filter=0
# Pulse counter pre-divider (1,2,4,8)
direct-presc=1
# Pulse counting interval (ms)
direct-time=1000
```

```
# Mode on startup: N-none, I-indirect, D-direct, F-free count
initial-mode=N
```

### 13.10.3 Frequency Capture Commands

Some commands include optional parameter setting. Using 0 in the field keeps the previous value. Those fields are marked with \*.

Code	Function	Structure
0	<b>STOP</b> Stop all measurements, go idle	
1	<b>INDIRECT_CONT_START</b> Start a repeated reciprocal measurement	
2	<b>INDIRECT_BUTST_START</b> Start a burst of reciprocal measurements	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u16</b> number of periods</li> </ul> <i>Response:</i> <ul style="list-style-type: none"> <li>• <b>u16</b> core speed (MHz)</li> <li>• <b>u16</b> number of periods</li> <li>• <b>u64</b> sum of all periods (ticks)</li> <li>• <b>u16</b> sum of on-times (ticks)</li> </ul>
3	<b>DIRECT_CONT_START</b> Start a repeated direct measurement	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u16</b> *measurement time</li> <li>• <b>u8</b> *prescaller (1, 2, 4, 8)</li> </ul>
4	<b>DIRECT_BURST_START</b> Start a single direct measurement. Longer capture time may help increase accuracy for stable signals.	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u16</b> *measurement time (ms)</li> <li>• <b>u8</b> *prescaller (1, 2, 4, 8)</li> </ul> <i>Response:</i> <ul style="list-style-type: none"> <li>• <b>u8</b> prescaller</li> <li>• <b>u16</b> measurement time (ms)</li> <li>• <b>u32</b> pulse count</li> </ul>
5	<b>FREECOUNT_START</b> Clear and start the pulse counter	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u8</b> *prescaller (1,2,4,8)</li> </ul>
6	<b>MEASURE_SINGLE_PULSE</b> Measure a single pulse of the active level. Waits for a rising edge.	<i>Response:</i> <ul style="list-style-type: none"> <li>• <b>u16</b> core speed (MHz)</li> <li>• <b>u32</b> pulse length (ticks)</li> </ul>
7	<b>FREECOUNT_CLEAR</b> Read and clear the pulse counter.	<i>Response:</i> <ul style="list-style-type: none"> <li>• <b>u32</b> previous counter value</li> </ul>

Code	Function	Structure
10	<b>INDIRECT_CONT_READ</b> Read the latest value from the continuous reciprocal measurement, if running.	<i>Response:</i> <ul style="list-style-type: none"> <li>• <b>u16</b> core speed (MHz)</li> <li>• <b>u32</b> period length (ticks)</li> <li>• <b>u32</b> on-time (ticks)</li> </ul>
11	<b>DIRECT_CONT_READ</b> Read the latest value from the continuous direct measurement, if running.	<i>Response:</i> <ul style="list-style-type: none"> <li>• <b>u8</b> prescaller</li> <li>• <b>u16</b> measurement time (ms)</li> <li>• <b>u32</b> pulse count</li> </ul>
12	<b>FREECOUNT_READ</b> Read the pulse counter value	<i>Response:</i> <ul style="list-style-type: none"> <li>• <b>u32</b> pulse count</li> </ul>
20	<b>SET_POLARITY</b> Set pulse polarity (active level)	<i>Response:</i> <ul style="list-style-type: none"> <li>• <b>u8</b> polarity (0,1)</li> </ul>
21	<b>SET_PRESCALLER</b> Set prescaller for the direct mode	<i>Response:</i> <ul style="list-style-type: none"> <li>• <b>u8</b> prescaller (1,2,4,8)</li> </ul>
22	<b>SET_INPUT_FILTER</b> Set input filtering (a hardware feature designed to ignore glitches)	<i>Response:</i> <ul style="list-style-type: none"> <li>• <b>u8</b> filtering factor (0-15, 0=off)</li> </ul>
23	<b>SET_DIR_MSEC</b> Set direct measurement time	<i>Response:</i> <ul style="list-style-type: none"> <li>• <b>u16</b> measurement time (ms)</li> </ul>
30	<b>RESTORE_DEFAULTS</b> Restore all run-time adjustable parameters to their configured default values	

## 13.11 ADC Unit

The analog/digital converter unit is one of the most complicated units implemented in the project. The unit can measure the voltage on an input pin, either as its immediate value, or averaged with exponential forgetting. Isochronous sampling is available as well: It's possible to capture a fixed-length block of data on demand, or as a response to a triggering condition on any of the enabled input pins. The **ADC** must continuously sample the inputs to make the averaging and level based triggering possible; as a consequence, a pre-trigger buffer is available that can be read together with the block of samples following a trigger. The **ADC** unit can also be switched to a continuous streaming mode.

It's possible to activate any number of the 16 analog inputs of the **ADC** peripheral simultaneously. The maximum continuous sampling frequency, which reaches 70 kps with one channel, lowers with an increasing number of enabled channels as the amount of data to transfer to the host increases.

### 13.11.1 ADC Configuration

```
[ADC:adc08]
# Enabled channels, comma separated
# 0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17
# A0 A1 A2 A3 A4 A5 A6 A7 B0 B1 C0 C1 C2 C3 C4 C5 Tsens Vref
channels=16

# Sampling time (0-7)
sample_time=2
# Sampling frequency (Hz)
frequency=1000

# Sample buffer size
# - shared by all enabled channels
# - defines the maximum pre-trigger size (divide by # of channels)
# - captured data is sent in half-buffer chunks
# - buffer overrun aborts the data capture
buffer_size=256

# Enable continuous sampling with averaging
# Caution: This can cause DAC output glitches
averaging=Y
# Exponential averaging coefficient (permil, range 0-1000 ~ 0.000-1.000)
# - used formula:  $y[t]=(1-k)*y[t-1]+k*u[t]$ 
# - not available when a capture is running
avg_factor=500
```

### 13.11.2 ADC Events

Code	Function	Structure
50	<b>TRIGGERED</b> The first event generated when a triggering condition occurs. The payload includes pre-trigger and the transaction continues with a sequence of CAPTURE events sharing the same frame ID. The serial number is incremented with each stream chunk and can be used to detect lost data frames.	<i>Payload:</i> <ul style="list-style-type: none"> <li>• <b>u32</b> pre-trigger length</li> <li>• <b>u8</b> triggering edge (1-falling, 2-rising, 3-forced)</li> <li>• <b>u8</b> stream serial number</li> <li>• <b>u16[]</b> pre-trigger data</li> </ul>

Code	Function	Structure
51	<b>CAPTURE_DATA</b> A chunk of sampled data in a stream, block, or a triggered capture. More data will follow.	<i>Payload:</i> <ul style="list-style-type: none"> <li>• <b>u8</b> stream serial number</li> <li>• <b>u16[]</b> sample data</li> </ul>
52	<b>CAPTURE_END</b> Indicates the end of a multi-part capture. The payload may be empty if there is no more data to send (e.g. a stream had to be unexpectedly closed).	<i>Payload:</i> <ul style="list-style-type: none"> <li>• <b>u8</b> stream serial number</li> <li>• <b>u16[]</b> sample data</li> </ul>

### 13.11.3 ADC Commands

Code	Function	Structure
0	<b>READ_RAW</b> Get the last raw sample from enabled channels.	<i>Response:</i> <ul style="list-style-type: none"> <li>• <b>u16[]</b> raw values 0–4095</li> </ul>
1	<b>READ_SMOOTHED</b> Get the averaged values from enabled channels. Not available for high sample rates and when disabled.	<i>Response:</i> <ul style="list-style-type: none"> <li>• <b>float32[]</b> smoothed values 0–4095</li> </ul>
2	<b>READ_CAL_CONSTANTS</b> Read factory calibration constants from the MCU's ROM	<i>Response:</i> <ul style="list-style-type: none"> <li>• <b>u16</b> VREFINT_CAL (raw word)</li> <li>• <b>u16</b> VREFINT_CAL_VADCREF (mV)</li> <li>• <b>u16</b> TSENSE_CAL1 (raw word)</li> <li>• <b>u16</b> TSENSE_CAL2 (raw word)</li> <li>• <b>u16</b> TSENSE_CAL1_TEMP (°C)</li> <li>• <b>u16</b> TSENSE_CAL2_TEMP (°C)</li> <li>• <b>u16</b> TSENSE_CAL_VADCREF (mV)</li> </ul>
10	<b>GET_ENABLED_CHANNELS</b> Get numbers of all enabled channels (0-based)	<i>Response:</i> <ul style="list-style-type: none"> <li>• <b>u8[]</b> enabled channel numbers</li> </ul>
11	<b>GET_SAMPLE_RATE</b> Get the current sample rate (in Hz)	<i>Response:</i> <ul style="list-style-type: none"> <li>• <b>u32</b> requested sample rate</li> <li>• <b>float32</b> real sample rate</li> </ul>

Code	Function	Structure
20	<b>SETUP_TRIGGER</b> Configure the triggering level and other trigger parameters. This command does <i>not</i> arm the trigger!	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u8</b> source channel number</li> <li>• <b>u16</b> triggering level</li> <li>• <b>u8</b> active edge (1-falling, 2-rising, 3-any)</li> <li>• <b>u32</b> pre-trigger sample count</li> <li>• <b>u32</b> post-trigger sample count</li> <li>• <b>u16</b> hold-off time (ms)</li> <li>• <b>u8</b> auto re-arm (0,1)</li> </ul>
21	<b>ARM</b> Arm the trigger for capture.	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u8</b> auto re-arm (0, 1, 255-no change)</li> </ul>
22	<b>DISARM</b> Dis-arm the trigger.	
23	<b>ABORT</b> Abort any ongoing capture and dis-arm the trigger.	
24	<b>FORCE_TRIGGER</b> Manually trip the trigger, as if the threshold level was reached.	
25	<b>BLOCK_CAPTURE</b> Capture a fixed-length sequence of samples.	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u32</b> number of samples</li> </ul>
26	<b>STREAM_START</b> Start a real-time stream of samples	
27	<b>STREAM_STOP</b> Stop an ongoing stream	
28	<b>SET_SMOOTHING_FACTOR</b> Set the smoothing factor ( $\times 10^3$ ).	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u16</b> smoothing factor 0-1000</li> </ul>
29	<b>SET_SAMPLE_RATE</b> Set the sampling frequency.	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u32</b> frequency in Hz</li> </ul>
30	<b>ENABLE_CHANNELS</b> Select channels to sample. The channels must be configured in the unit settings.	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u32</b> bit map of channels to enable</li> </ul>
31	<b>SET_SAMPLE_TIME</b> Set the sample time of the ADC's sample&hold circuit.	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u8</b> sample time 0–7</li> </ul>



## 13.12 DAC Unit

The digital/analog unit works with the two-channel **DAC** peripheral of the microcontroller. It can be used in two modes: **DC** output, and waveform generation.

The waveform mode implements direct digital synthesis (explained in section 8.3.2) of a sine, rectangle, sawtooth or triangle wave. The generated frequency can be set with a sub-hertz precision up to the lower tens of kHz. The two outputs can use a different waveform shape, be synchronized, and their phase offset, as well as frequency, is dynamically adjustable.

### 13.12.1 DAC Configuration

```
[DAC:dac@13]
# Enabled channels (1:A4, 2:A5)
ch1_enable=Y
ch2_enable=Y
# Enable output buffer
ch1_buff=Y
ch2_buff=Y
# Superimposed noise type (NONE,WHITE,TRIANGLE) and nbr. of bits (1-12)
ch1_noise=NONE
ch1_noise-level=3
ch2_noise=NONE
ch2_noise-level=3
```

### 13.12.2 DAC Commands

Channels are specified in all commands as bit map:

- 0x01 - channel 1
- 0x02 - channel 2
- 0x03 - both channels affected at once

Code	Function	Structure
0	<b>WAVE_DC</b> Set a <b>DC</b> level, disable <b>DDS</b> for the channel	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u8</b> channels</li> <li>• <b>u16</b> level (0–4095)</li> </ul>
1	<b>WAVE_SINE</b> Start a sine waveform	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u8</b> channels</li> </ul>
2	<b>WAVE_TRIANGLE</b> Start a symmetrical triangle waveform	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u8</b> channels</li> </ul>

Code	Function	Structure
3	<b>WAVE_SAWTOOTH_UP</b> Start a rising sawtooth waveform	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u8</b> channels</li> </ul>
4	<b>WAVE_SAWTOOTH_DOWN</b> Start a falling sawtooth waveform	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u8</b> channels</li> </ul>
5	<b>WAVE_RECTANGLE</b> Start a rectangle waveform	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u8</b> channels</li> <li>• <b>u16</b> on-time (0–8191)</li> <li>• <b>u16</b> high level (0–4095)</li> <li>• <b>u16</b> low level (0–4095)</li> </ul>
10	<b>SYNC</b> Synchronize the two channels. The phase accumulator is reset to zero.	
20	<b>SET_FREQUENCY</b> Set the channel frequency	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u8</b> channels</li> <li>• <b>float32</b> frequency</li> </ul>
21	<b>SET_PHASE</b> Set a channel's phase. It's recommended to set the phase only of one channel, leaving the other at 0°.	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u8</b> channels</li> <li>• <b>u16</b> phase (0–8191)</li> </ul>
22	<b>SET_DITHER</b> Control the dithering function of the <b>DAC</b> block. A high noise amplitude can cause an overflow to the other end of the output range due to a bug in the <b>DAC</b> peripheral. Use value 255 to leave the parameter unchanged.	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u8</b> channels</li> <li>• <b>u8</b> noise type (0-none, 1-white, 2-triangle)</li> <li>• <b>u8</b> number of noise bits (1–12)</li> </ul>

## 13.13 PWM Unit

The **PWM** unit uses a timer/counter to generate a **PWM** signal. There are four outputs with a common frequency and phase, but independent duty cycles. Each channel can be individually enabled or disabled.

This unit is intended for applications like light dimming, heater regulation, or the control of H-bridges.

diagram, also show what is duty cycle

### 13.13.1 PWM Configuration

```
[PWMDIM:pwm@12]
# Default pulse frequency (Hz)
frequency=1000
# Pin mapping - 0=disabled
# Channel1 - 1:PA6, 2:PB4, 3:PC6
ch1_pin=1
# Channel2 - 1:PA7, 2:PB5, 3:PC7
ch2_pin=0
# Channel3 - 1:PB0, 2:PC8
ch3_pin=0
# Channel4 - 1:PB1, 2:PC9
ch4_pin=0
```

### 13.13.2 PWM Commands

Code	Function	Structure
0	<b>SET_FREQUENCY</b> Set the PWM frequency	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u32</b> frequency in Hz</li> </ul>
1	<b>SET_DUTY</b> Set the duty cycle of one or more channels	<i>Request:</i> <ul style="list-style-type: none"> <li>• Repeat 1–4 times: <ul style="list-style-type: none"> <li>– <b>u8</b> channel number 0–3</li> <li>– <b>u16</b> duty cycle 0–1000</li> </ul> </li> </ul>
2	<b>STOP</b> Stop the hardware timer. Outputs enter low level.	
3	<b>START</b> Start the hardware timer.	

## 13.14 Touch Sense Unit

The touch sensing unit provides an access to the **TSC** peripheral. Its function is explained in section 8.4. The unit configures the **TSC** and reads the output values of each enabled touch pad.

### 13.14.1 Touch Sense Configuration

```
[TOUCH:touch@11]
# Pulse generator clock prescaller (1,2,4,...,128)
pg-clock-prediv=32
```

```

# Sense pad charging time (1-16)
charge-time=2
# Charge transfer time (1-16)
drain-time=2
# Measurement timeout (1-7)
sense-timeout=7

# Spread spectrum max deviation (0-128,0=off)
ss-deviation=0
# Spreading clock prescaler (1,2)
ss-clock-prediv=1

# Optimize for interlaced pads (individual sampling with others floating)
interlaced-pads=N

# Button mode debounce (ms) and release hysteresis (lsb)
btn-debounce=20
btn-hysteresis=10

# Each used group must have 1 sampling capacitor and 1-3 channels.
# Channels are numbered 1,2,3,4

# Group1 - 1:A0, 2:A1, 3:A2, 4:A3
g1_cap=
g1_ch=
# Group2 - 1:A4, 2:A5, 3:A6, 4:A7
g2_cap=
g2_ch=
# ...

```

### 13.14.2 Touch Sense Events

Code	Function	Structure
0	<b>BUTTON_CHANGE</b> The binary state of some of the capacitive pads with button mode enabled changed.	<i>Payload:</i> <ul style="list-style-type: none"> <li>• <b>u32</b> binary state of all channels</li> <li>• <b>u32</b> changed / trigger-generating channels</li> </ul>

### 13.14.3 Touch Sense Commands

Code	Function	Structure
0	<b>READ</b> Read the raw touch pad values (lower indicates higher capacitance). Values are ordered by group and channel.	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u16[]</b> raw values</li> </ul>
1	<b>SET_BIN_THR</b> Set the button mode thresholds for all channels. Value 0 disables the button mode for a channel.	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u16[]</b> thresholds</li> </ul>
2	<b>DISABLE_ALL_REPORTS</b> Set thresholds to 0, disabling the button mode for all pads.	
3	<b>SET_DEBOUNCE_TIME</b> Set the button mode debounce time (used for all pads with button mode enabled).	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u16</b> debounce time (ms)</li> </ul>
4	<b>SET_HYSTERESIS</b> Set the button mode hysteresis.	<i>Request:</i> <ul style="list-style-type: none"> <li>• <b>u16</b> hystheresis</li> </ul>



# Chapter 14

## Client Software

With the communication protocol clearly defined in chapters 10 and 13, respective 11 for the wireless gateway, the implementation of a client software is relatively straightforward. Two proof-of-concept client libraries have been developed, in languages C and Python.

### 14.1 General Library Structure

The structure of a GEX support library is in all cases similar:

- **USB or serial port access**

This is the only platform-dependent part of the library. Unix-based systems provide a standardized POSIX API to configure the serial port. A raw access to USB endpoints is possible using the libUSB C library. Access to the serial port or USB from C on MS Windows has not been investigated, but should be possible using proprietary APIs.

Accessing the serial port or USB endpoints from Python is more straightforward thanks to the cross platform libraries *PySerial* and *PyUSB*.

- **TinyFrame**

The *TinyFrame* protocol library can be used directly in desktop C applications, and it has been ported to Python and other languages.

- **Higher-level GEX logic**

The host side of the communication protocol described in chapter 10 should be implemented as a part of the library. This includes the reading and writing of configuration files, unit list read-out, command payload building, and asynchronous event parsing.

Additional utilities may be defined on top of this basic protocol support for the command API of different GEX units, as described in 13. Those unit-specific “drivers” are available in the provided Python library.

### 14.2 Python Library

The Python GEX library it implements both serial port and raw USB endpoint access, and includes support classes for each unit type. Its development has been proritized over the C

library because of its potential to integrate with MATLAB, and the general ease-of-use that comes with the Python syntax.

The library is composed of a *transport*, the core class called *client*, and unit classes. Three transport implementations have been developed; the gateway is accessed by wrapping either of the transports in an instance of `DongleAdapter`.

- `TrxSerialSync` – virtual serial port access with polling for a response
- `TrxSerialThread` – virtual serial port access with a polling thread and semaphore-based notifications
- `TrxRawUSB` – similar to `TrxSerialThread`, but using a raw USB endpoint access

The unit classes wrap the command and event API described in chapter 13; all classes and methods are annotated by documentation comments for easy understanding.


An example Python program showing a pattern with the LED matrix driver IS31FL3730 is presented below as an illustration of the library usage. A photo of the produced pattern can be seen in figure 14.1.

```
#!/bin/env python3
import gex
with gex.Client(gex.TrxRawUSB()) as client:
    bus = gex.I2C(client, 'i2c')
    addr = 0x61
    bus.write_reg(addr, 0x00, 0b00011000) # dual matrix
    bus.write_reg(addr, 0x0D, 0b00001110) # 34 mA
    bus.write_reg(addr, 0x19, 64) # set brightness
    # matrix 1
    bus.write_reg(addr, 0x01, [
        0xAA, 0x55, 0xAA, 0x55,
        0xAA, 0x55, 0xAA, 0x55
    ])
    # matrix 2
    bus.write_reg(addr, 0x0E, [
        0xFF, 0x00, 0xFF, 0x00,
        0xFF, 0x00, 0xFF, 0x00
    ])
    # update display
    bus.write_reg(addr, 0x0C, 0x01)
```

## 14.3 MATLAB integration

The Python library can be accessed from MATLAB scripts thanks to the MATLAB's two-way Python integration [53]. Controlling GEX from MATLAB may be useful when



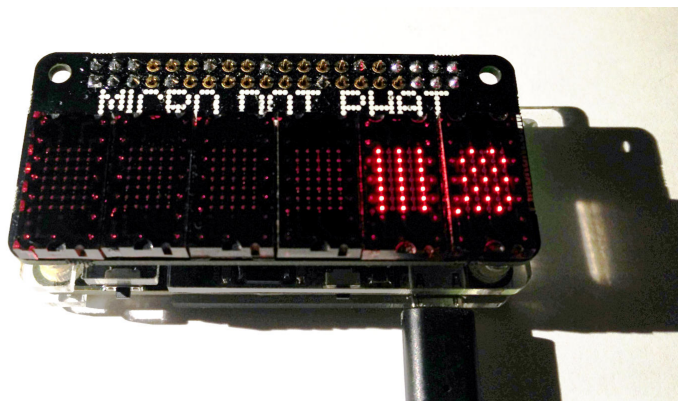

**Figure 14.1:** GEX Zero with the Micro Dot pHAT add-on board showing a test pattern

additional processing is required, e.g. with data from the [ADC](#); however, in many cases, an open source alternative native to Python exists that could be used for the same purpose, such as the NumPy and SciPy libraries [54].

add a matlab example

## 14.4 C Library

The C library is more simplistic than the Python one; it supports only the serial port transport ([UART](#) or [CDC/ACM](#)) and does not implement asynchronous polling or the unit support drivers. What *is* implement—the transport, a basic protocol handler, and payload building and parsing utilities—is sufficient for most applications, though less convenient than the Python library.

This low level library is intended for applications where the performance of the Python implementation is insufficient, or where an integration with existing C code is required. The full [API](#) can be found in the library header files. A C version of the example Python script controlling a [LED](#) matrix driver follows:

add the example

Measurement / evaluation examples here...





## **Part IV**

### **Results**





# Chapter 15

## Conclusion

xy was developed ... project works great ... possible future improvements ...





## Appendices





# Appendix A

## Bibliography

- [1] Seeed Technology Co.,Ltd. *Bus Pirate v4 product page*. URL: <https://www.seeedstudio.com/Bus-Pirate-v4-p-740.html> (visited on 05/12/2018).
- [2] National Instruments. *I<sup>2</sup>C/SPI Interface Device product page*. URL: <https://www.ni.com/en-gb/shop/select/i2c-spi-interface-device> (visited on 05/12/2018).
- [3] National Instruments. *USB-6008 product page*. URL: <http://www.ni.com/en-gb/support/model.usb-6008.html> (visited on 05/12/2018).
- [4] Total Phase, Inc. *USB-6008 product page*. URL: <https://www.totalphase.com/products/aardvark-i2cspi/> (visited on 05/12/2018).
- [5] USB Implementers Forum, Inc. *Universal Serial Bus Specification*. 2000. URL: [http://www.usb.org/developers/docs/usb20\\_docs/](http://www.usb.org/developers/docs/usb20_docs/) (visited on 05/12/2018).
- [6] Craig Peacock. *USB in a NutShell*. URL: <https://www.beyondlogic.org/usbnutshell> (visited on 05/12/2018).
- [7] MQP Electronics Ltd. *USB Made Simple*. 2008. URL: <http://www.usbmadesimple.co.uk/> (visited on 05/12/2018).
- [8] Microsoft Corporation. *Windows 2000 Professional Resource Kit / USB Functions*. 2008. URL: [https://docs.microsoft.com/en-us/previous-versions/windows/it-pro/windows-2000-server/cc939102\(v%3dtechnet.10\)](https://docs.microsoft.com/en-us/previous-versions/windows/it-pro/windows-2000-server/cc939102(v%3dtechnet.10)) (visited on 05/12/2018).
- [9] USB Implementers Forum, Inc. *USB Class Codes*. 2016. URL: [http://www.usb.org/developers/defined\\_class](http://www.usb.org/developers/defined_class) (visited on 05/12/2018).
- [10] *pid.codes, a registry of USB PID codes for open source hardware projects*. URL: <http://pid.codes/> (visited on 05/12/2018).
- [11] EEVblog Electronics Community Forum. *pid.codes, a registry of USB PID codes for open source hardware projects*. URL: <https://www.eevblog.com/forum/projects/driving-the-1k5-usb-pull-up-resistor-on-d/> (visited on 05/12/2018).
- [12] USB Implementers Forum, Inc. *USB Mass Storage Class, Specification Overview*. 2010. URL: [http://www.usb.org/developers/docs/devclass\\_docs/Mass\\_Storage\\_Specification\\_Overview\\_v1.4\\_2-19-2010.pdf](http://www.usb.org/developers/docs/devclass_docs/Mass_Storage_Specification_Overview_v1.4_2-19-2010.pdf) (visited on 05/12/2018).
- [13] USB Implementers Forum, Inc. *USB Mass Storage Class, Bulk-Only Transport*. 1999. URL: [http://www.usb.org/developers/docs/devclass\\_docs/usbmssbulk\\_10.pdf](http://www.usb.org/developers/docs/devclass_docs/usbmssbulk_10.pdf) (visited on 05/12/2018).



- [29] “vinDaci”. *Long Filename Specification*. 1998. URL: <http://home.teleport.com/~brainy/lfm.htm> (visited on 05/12/2018).
- [30] Arm Mbed. *Arm Mbed DAPLink source code repository*. 2018. URL: <https://github.com/ARMmbed/DAPLink> (visited on 05/12/2018).
- [31] “nkcelectronics”. *Retrofitting AutoReset feature into an old Arduino serial board*. URL: <https://playground.arduino.cc/Learning/AutoResetRetrofit> (visited on 05/13/2018).
- [32] SD Group. *SD Specifications, Part 1: Physical Layer Simplified Specification*. Tech. rep. 2010. URL: [https://www.cs.utexas.edu/~simon/395t\\_os/resources/Part\\_1\\_Physical\\_Layer\\_Simplified\\_Specification\\_Ver\\_3.01\\_Final\\_100518.pdf](https://www.cs.utexas.edu/~simon/395t_os/resources/Part_1_Physical_Layer_Simplified_Specification_Ver_3.01_Final_100518.pdf) (visited on 05/13/2018).
- [33] NXP Semiconductors. *I2C-bus specification and user manual*. 2014. URL: <https://www.nxp.com/docs/en/user-guide/UM10204.pdf> (visited on 05/12/2018).
- [34] Jared Becker Jonathan Valdez. *Understanding the I2C Bus*. Tech. rep. 2015. URL: <http://www.ti.com/lit/an/slva704/slva704.pdf> (visited on 05/12/2018).
- [35] Dallas Semiconductor. *AN214: Using a UART to Implement a 1-Wire Bus Master*. Tech. rep. URL: <https://www.maximintegrated.com/en/app-notes/index.mvp/id/214> (visited on 05/13/2018).
- [36] Dallas Semiconductor. *DS18S20 High Precision 1-Wire Digital Thermometer*. Tech. rep. URL: <https://datasheets.maximintegrated.com/en/ds/DS18S20.pdf> (visited on 05/13/2018).
- [37] Dallas Semiconductor. *AN162: Interfacing the DS18X20/DS1822 1-Wire Temperature Sensor in a Micro-controller Environment*. Tech. rep. URL: <https://www.maximintegrated.com/en/app-notes/index.mvp/id/162> (visited on 05/13/2018).
- [38] Worldsemi. *WS2812B datasheet*. Tech. rep. URL: [www.world-semi.com/DownloadFile/108](http://www.world-semi.com/DownloadFile/108) (visited on 05/13/2018).
- [39] SiTime Corporation. *AN10033: Frequency Measurement Guidelines for Oscillators*. Tech. rep. URL: <https://www.sitime.com/api/gated/AN10033-Frequency-Measurement-Guidelines-for-Oscillators.pdf> (visited on 05/13/2018).
- [40] Paul Boven. “Increasing the resolution of reciprocal frequency counters”. In: *Proceedings of the 50. VHF meeting in Weinheim*. URL: <https://www.febo.com/pipermail/time-nuts/attachments/20071201/e7833af5/attachment.pdf> (visited on 05/13/2018).
- [41] Maxim Integrated. *AN1080: Understanding SAR ADCs: Their Architecture and Comparison with Other ADCs*. Tech. rep. 2001. URL: <https://pdfserv.maximintegrated.com/en/an/AN1080.pdf> (visited on 05/13/2018).
- [42] Eva Murphy and Colm Slattery. “All about direct digital synthesis”. In: *Ask The Application Engineer* 33 (2004). URL: <http://www.analog.com/media/en/analog-dialogue/volume-38/number-3/articles/all-about-direct-digital-synthesis.pdf>.
- [43] ST Microelectronics. *RM0091: STM32F0x1/STM32F0x2/STM32F0x8 reference manual*. 2017. URL: [http://www.st.com/resource/en/reference\\_manual/dm00031936.pdf](http://www.st.com/resource/en/reference_manual/dm00031936.pdf) (visited on 05/12/2018).

